 
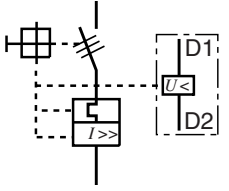 
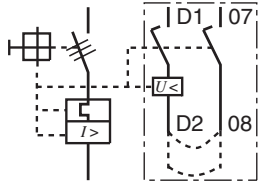 


Undervoltage and Shunt Trip Units

Description	Connection Diagram ⁽¹⁾	Trip Rating	For Use With	Cat. No.
Undervoltage Trip - Left-side mounted - Adds 18 mm to the width of the device - Automatically trips MPCB/MCP when voltage falls below 35...70%		24V, 60 Hz	140M-C, D, F; 140U-D	140M-C-UXJ
		24V, 50 Hz		140M-C-UXK
		120V, 60 Hz		140M-C-UXD
		110V, 50 Hz		140M-C-UXC
		208V, 60 Hz		140M-C-UXH
		220...230V, 50 Hz		140M-C-UXF
		240...260V, 60 Hz		140M-C-UXA
		277V, 60 Hz		140M-C-UXT
		380...400V, 50 Hz		140M-C-UXN
		480V, 60 Hz/415V, 50 Hz		140M-C-UXB
		575V, 60 Hz/500V, 50 Hz		140M-C-UXM
		600V, 60 Hz		140M-C-UXVC
Undervoltage Trip - Left-side mounted 2 early make contacts integrated - Adds 18 mm to the width of the device - Automatically trips MPCB/MCP when voltage falls below 35...70%		24V, 60 Hz	140M-C, D, F	140M-C-UCJ
		24V, 50 Hz		140M-C-UCK
		120V, 60 Hz		140M-C-UCD
		110V, 50 Hz		140M-C-UCC
		208V, 60 Hz		140M-C-UCH
		220...230V, 50 Hz		140M-C-UCF
		240...260V, 60 Hz		140M-C-UCA
		277V, 60 Hz		140M-C-UCT
		380...400V, 50 Hz		140M-C-UCN
		480V, 60 Hz/415V, 50 Hz		140M-C-UCB
		575V, 60 Hz/500V, 50 Hz		140M-C-UCM
		600V, 60 Hz		140M-C-UCVC
Shunt Trip - Left-side mounted - Adds 18 mm to the width of the device - Provides remote tripping of the MPCB/MCP - Maximum on time for DC operated devices: 5 sec.		24V, 60 Hz	140M-C, D, F; 140U-D	140M-C-SNJ
		24V, 50 Hz		140M-C-SNK
		110V, 50 Hz/120V, 60 Hz		140M-C-SND
		208V, 60 Hz		140M-C-SNH
		220...230V, 50 Hz		140M-C-SNF
		240...260V, 60 Hz		140M-C-SNA
		277V, 60 Hz		140M-C-SNT
		380...400V, 50 Hz		140M-C-SNN
		480V, 60 Hz/415V, 50 Hz		140M-C-SNB
		575V, 60 Hz/500V, 50 Hz		140M-C-SNM
		600V, 60 Hz		140M-C-SNVC
		24V DC		140M-C-SNZJ

(1) Connection Diagram Reference:

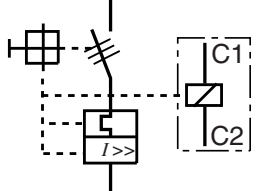