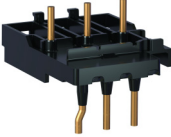
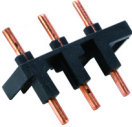
 






Table 39 - Modules and Adapters

	Description	Rating	For Use With	Cat. No.
	ECO Connecting Module • For direct-on-line (DOL) and reversing starters • Eco-starters mount on single DIN Rail (140MT on DIN Rail) • Electrical and mechanical interconnection of 140MT and 100-K contactors	12 A (IEC), 11 A (UL)	140MT-C to 100-K	140MT-C-PEK12
	ECO Connecting Module • Eco-starters mount on single DIN Rail (140MT on DIN Rail) • Electrical and mechanical interconnection of 140MT MPCB and 100-E contactors	18 A (IEC), 17 A (UL)	140MT-C to 100(S)-E09...16 ⁽¹⁾	140MT-C-PE16
			140MT-C to 100(S)-E09QJ...16QJ	140MT-C-PSE16
			140MT-D to 100(S)-E09...16 ⁽¹⁾	140MT-D-PE16
			140MT-D to 100(S)-E09QJ...16QJ	140MT-D-PSE16
	ECO Connecting Module • Eco-starters mount on single DIN Rail (140MT on DIN Rail) • Electrical and mechanical interconnection of 140MT MPCB and 100-C contactors	23 A (IEC), 22 A (UL)	140MT-C to 100-C09...C23	140MT-C-PEC23
			140MT-D to 100-C09...C23	140MT-D-PEC23
	ECO Connecting Module • Eco-starters mount on single DIN Rail (140MT on DIN Rail) • Electrical and mechanical interconnection of 140MT MPCB and 100-E contactors	30 A (IEC), 30 A (UL)	140MT-D to 100-C30...C37	140MT-D-PEC37
			140MT-C to 100(S)-E26...38 ⁽¹⁾	140MT-C-PE38
			140MT-C to 100(S)-E26QJ...38QJ	140MT-C-PSE38
			140MT-D to 100(S)-E26...38 ⁽¹⁾	140MT-D-PE38
	Connecting Module • Contactor and MPCB MUST BE mounted separately on (2) DIN Rails • Electrical interconnection of 140MT and 100-C contactors • Compatible contactor coil types: - AC (all) - 12V DC - 24V DC Electronic	23 A (IEC), 30 A (UL) and 30 A (IEC), 30 A (UL)	140MT-C to 100-C09...C23	140MT-C-PNC23
			140MT-D to 100-C09...C23	140MT-D-PNC23
			140MT-D to 100-C30...C37	140MT-D-PNC37
	Connecting Module • Contactor and MPCB MUST BE mounted separately on (2) DIN Rails • Electrical interconnection of 140MT-F and 100-C contactors	34 A	140MT-F to 100-C30...C37	140MT-F-PNC37
			140MT-F to 100-E26...E38	140MT-F-PNE38
		45 A	140MT-F to 100-C43...C55	140MT-F-PNC55
	Coil Extension Modules • Provides access to coil terminals on 3-component starters • 140MT-F-PSC43 fits ONLY on 140MT-C and 140MT-D MPCBs		100-C09...C23 contactors	140MT-C-PSC23
			100-C30...C37 contactors	140MT-F-PSC43
	Spacing Adapter • Required for self-protected combination motor controller (Type E) applications of Bul. 140MT-C, -D, and -F MPCBs. Not for use with bus bars.		140MT-C, -D	140MT-C-TE
			140MT-F	140MT-F-TE

(1) Not suitable for 100(S)-E09...38QJ or 300(S)-T0...B0QJ contactors.

Table 40 - Other Accessories

	Description	For Use With	Cat. No.
	Feeder Block for Compact Busbar • Supply of compact busbars • Increases terminal capacity	140MT-C	140MT-C-WBE
		140MT-F	140MT-F-WBE
	Feeder Terminal for Compact Busbar • For supply of compact busbars • Top feed — overlaps compact busbar • Meets UL Type E spacing requirements	140MT-C, -D	140MT-C-WTEN
		140MT-F	140MT-F-WTE