

## 1492-XIM120-8R

*Relay Expander (LED Indicating) with Eight (8) 120V AC Relays*



### *Application Notes*

1. **Compatibility** — To ensure proper operation with the I/O module, do **not** exceed the voltage and current ratings of the XIM.
2. **Wiring** — Refer to the Label Section on page 174. For Field-Side Wiring Diagrams, refer to the Wiring System web site information on page 200.
3. This relay expander must be used with a 120V AC relay master.
4. **Dimensions** — Refer to page 166.
5. **Maximum Relay Switching** — Refer to page 185.
6. LEDs provide PLC output ON/OFF indication.

### *Pinout*

Refer to page 125.

**1492-XIM120-8R, Continued***Pinout, Continued*