

Pushbutton Units and Indicator Lights

30 mm Heavy Duty, Watertight/Oiltight, Class 52

Class 52 oiltight pushbutton stations

Selection and ordering data

	Actuator identification C = top device in station B = middle device in station A = bottom device in station	Degree of protection	Contact / voltage	No. of command points	Order no.	Pack Unit
1 unit control station	A = Momentary flush pushbutton black, label "START"	NEMA 12	1NO - 1NC	1	52C101A	
	A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO - 1NC	1	52C103A	
	A = Momentary mushroom head red, label "STOP"	NEMA 12	1NO - 1NC	1	52C104A	
	A = Maintained metal mushroom head red, label "EMERGENCY STOP"	NEMA 12	1NO - 1NC	1	52C117A	
	A = 2 position selector switch "OFF-ON"	NEMA 12	1NO - 1NC	1	52C159A	
	A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 12	1NO - 1NC	1	52C156A	
	A = Indicator light, red	NEMA 12	120V Transformer type	1	52C131A	
	A = Indicator light, green	NEMA 12	120V Transformer type	1	52C135A	
	A = Momentary flush pushbutton black, label "START"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C101S	
	A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C103S	
	A = Momentary mushroom head red, label "STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C104S	
	A = Maintained metal mushroom head red, label "EMERGENCY STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C116S	
	A = 2 position selector switch "OFF-ON"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C159S	
	A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 4X Stainless Steel	1NO - 1NC	1	52C156S	
	A = Momentary flush pushbutton black, label "START"	NEMA 4X Fiberglass	1NO - 1NC	1	52C101X	
	A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	52C103X	
	A = Momentary mushroom head red, label "STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	52C104X	
	A = Maintained metal mushroom head red, label "EMERGENCY STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	52C116X	
	A = 2 position selector switch "OFF-ON"	NEMA 4X Fiberglass	1NO - 1NC	1	52C159X	
A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 4X Fiberglass	1NO - 1NC	1	52C156X		
2 unit control station	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO, 1NC 1NO, 1NC	2	52C201A	
	B = Momentary flush pushbutton green, label "START" A = Momentary Mushroom head pushbutton red, label "STOP"	NEMA 12	1NO, 1NC 1NO, 1NC	2	52C202A	
	B = Momentary flush pushbutton, label "FORWARD" A = Momentary flush pushbutton, label "REVERSE"	NEMA 12	1NO, 1NC 1NO, 1NC	2	52C204A	
	B = Momentary flush pushbutton, label "UP" A = Momentary flush pushbutton, label "DOWN"	NEMA 12	1NO, 1NC 1NO, 1NC	2	52C223A	
	B = Indicator light, red, label "RUN" A = Maintained selector switch, label "HAND-OFF-AUTO"	NEMA 12	120V Transformer type	2	52C224A	
	B = Indicator light, red A = Indicator light, green	NEMA 12	120V Transformer type	2	52C230A	
	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC	2	52C201S	
	B = Momentary flush pushbutton green, label "START" A = Momentary Mushroom head pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC	2	52C202S	
	B = Momentary flush pushbutton, label "UP" A = Momentary flush pushbutton, label "DOWN"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC	2	52C223S	
	B = Indicator light, red, label "RUN" A = Maintained selector switch, label "HAND-OFF-AUTO"	NEMA 4X Stainless Steel	120V Transformer type 1NO, 1NC	2	52C224S	
	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC	2	52C201X	
	B = Momentary flush pushbutton green, label "START" A = Momentary Mushroom head pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC	2	52C202X	
	B = Momentary flush pushbutton, label "UP" A = Momentary flush pushbutton, label "DOWN"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC	2	52C223X	
	B = Indicator light, red, label "RUN" A = Maintained selector switch, label "HAND-OFF-AUTO"	NEMA 4X Fiberglass	120V Transformer type 1NO, 1NC	2	52C224X	



Pushbutton Units and Indicator Lights

30 mm Heavy Duty, Watertight/Oiltight, Class 52

Class 52 oiltight pushbutton stations

Selection and ordering data

Actuator identification	Degree of protection	Contact / voltage	No. of command points	Order no.	Pack	
3 unit control station	C = Indicator light, red	NEMA 12	120V 1NO, 1NC	3	52C307A	nit
	B = Momentary flush pushbutton black, label "START"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "FORWARD"	NEMA 12	1NO, 1NC	3	52C301A	
	B = Momentary flush pushbutton black, label "REVERSE"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "UP"	NEMA 12	1NO, 1NC	3	52C332A	
	B = Momentary flush pushbutton black, label "DOWN"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "OPEN"	NEMA 12	1NO, 1NC	3	52C333A	
	B = Momentary flush pushbutton black, label "STOP"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "CLOSE"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "HI"	NEMA 12	1NO, 1NC	3	52C334A	
	B = Momentary flush pushbutton, black label "LOW"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Indicator light, red	NEMA 4X Stainless Steel	120V 1NO, 1NC	3	52C307S	
	B = Momentary flush pushbutton black, label "START"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "FORWARD"	NEMA 4X Stainless Steel	1NO, 1NC	3	52C301S	
	B = Momentary flush pushbutton black, label "REVERSE"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "UP"	NEMA 4X Stainless Steel	1NO, 1NC	3	52C332S	
	B = Momentary flush pushbutton black, label "DOWN"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "OPEN"	NEMA 4X Stainless Steel	1NO, 1NC	3	52C333S	
	B = Momentary flush pushbutton black, label "STOP"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "CLOSE"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "HI"	NEMA 4X Stainless Steel	1NO, 1NC	3	52C334S	
	B = Momentary flush pushbutton, black label "LOW"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Indicator light, red	NEMA 4X Fiberglass	120V 1NO, 1NC	3	52C307X	
	B = Momentary flush pushbutton black, label "START"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "FORWARD"	NEMA 4X Fiberglass	1NO, 1NC	3	52C301X	
	B = Momentary flush pushbutton black, label "REVERSE"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "UP"	NEMA 4X Fiberglass	1NO, 1NC	3	52C332X	
	B = Momentary flush pushbutton black, label "DOWN"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "OPEN"	NEMA 4X Fiberglass	1NO, 1NC	3	52C333X	
	B = Momentary flush pushbutton black, label "STOP"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "CLOSE"		1NO, 1NC			
	C = Momentary flush pushbutton black, label "HI"	NEMA 4X Fiberglass	1NO, 1NC	3	52C334X	
	B = Momentary flush pushbutton, black label "LOW"		1NO, 1NC			
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC			



1
2
3
4
5
6
7
8
9
10