



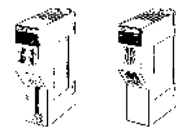

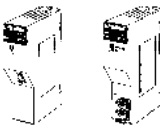


Communication Units

| Name | Specifications | | Model number | |
|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------|------------------------------|-----------------|
|  SYSMAC LINK Unit (coaxial cable) | A Bus Connection Unit must be ordered separately. | Data link table: 918 words | C200HW-SLK23 | |
| | | Data link table: 2,966 words | C200HW-SLK24 | |
| | Terminator | One required for each node at ends of System. | C1000H-TER01 | |
| | Attachment Stirrup | Provided with SYSMAC LINK Unit. | C200H-TL001 | |
| | F Adapter F Adapter Cover | To connect network | C1000H-CE001 C1000H-COV01 | |
|  SYSMAC LINK Unit (optical fiber cable) | Connect with H-PCF cable. A Bus Connection Unit must be ordered separately. | Data link table: 918 words | C200HW-SLK13 | |
| | | Data link table: 2,966 words | C200HW-SLK14 | |
| | Power Supply Adapter | Required when supplying backup power | For 1 or 2 Units | C200H-APS03 |
| Power Cable | Connects Power Supply Adapter and SYSMAC NET Link Unit. | For 1 Unit | C200H-CN111 | |
| | | For 2 Units | C200H-CN211 | |
| SYSMAC LINK Support Board (coaxial cable) | To connect IBM PC/AT or compatible as node in SYSMAC LINK system | | 3G8F5-SLK21-E | |
|  SYSMAC NET Link Unit | A Bus Connection Unit must be ordered separately. | | C200HS-SNT32 | |
| | Power Supply Adapter | Required when supplying backup power | For 1 Unit | C200H-APS01 |
| | | | For 2 Units | C200H-APS02 |
| | Power Cable | Connects Power Supply Adapter and SYSMAC NET Link Unit. | Included with C200H-APS01 | For 1 Unit |
| Included with C200H-APS02 | | | For 2 Units | C200H-CN002 |
|  Bus Connection Units | Connects SYSMAC LINK Unit or SYSMAC NET Link Unit to C200HW-COM01/COM04-E Communications Board | | For 1 Unit | C200HW-CE001 |
| | | | For 2 Units | C200HW-CE002 |
|  Host Link Units | Rack-mounting | C200H, C200HS, C200HE, C200HG, C200HX | APF/PCF | C200H-LK101-PV1 |
| | | | RS-422 | C200H-LK202-V1 |
| | | | RS-232C | C200H-LK201-V1 |
|  PC Link Unit | Single level: 32 Units Multilevel: 16 Units | | RS-485 | C200H-LK401 |
|  Remote I/O Master Units | Up to two per PC; connectable to up to 5 Slaves per PC total | | APF/PCF | C200H-RM001-PV1 |
| | | | Wired | C200H-RM201 |
| Remote I/O Slave Units | See <i>Racks</i> at beginning of product lists. | | | |