Data sheet

3RA2120-1KD24-0AP6



Fuseless motor starter Direct start 600VAC Size S0 9-12.5 Amp 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 150 KA Also full fills type Of coordination 1 1NO+1NC (contactor)

SIRIUS
non-fused motor starter 3RA2
direct starter
3RT2024-1AP60
3RV2011-1KA10
<u>8US1251-5NT10</u>
3RA2921-1AA00
S00
S0
Yes
690 V
3
6 kV
6g / 11 ms
10 000 000
2
-20 +60 °C
-50 +80 °C
-55 +80 °C
3
electromechanical
9 12.5 A
690 V
690 V
50 60 Hz
11.5 A
5 500 W
7 500 W
220 V
176 242 V

 at 60 Hz rated value 	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	7.2 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	
number of NC contacts for auxiliary contacts	1
number of NO contacts for auxiliary contacts	1
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	162.5 A
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
 at 480 V rated value 	11 A
at 600 V rated value	11 A
yielded mechanical performance [hp]	
 for single-phase AC motor 	
— at 110/120 V rated value	0.5 hp
— at 230 V rated value	2 hp
• for 3-phase AC motor	
— at 200/208 V rated value	3 hp
— at 220/230 V rated value	3 hp
— at 460/480 V rated value	7.5 hp
— at 575/600 V rated value	10 hp
Short-circuit protection	
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	
 at 400 V according to IEC 60947-4-1 rated value 	153 000 A
Installation/ mounting/ dimensions	
mounting position	vertical
mounting position	VELLICAL
fastening method	for snapping onto 60 mm busbar systems
fastening method	for snapping onto 60 mm busbar systems
fastening method height	for snapping onto 60 mm busbar systems 260 mm
fastening method height width	for snapping onto 60 mm busbar systems 260 mm 45 mm
fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm 45 mm
fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 45 mm
fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
fastening method height width depth required spacing • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — backwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — downwards — downwards — forwards — forwards — backwards — backwards — upwards — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • at the side — downwards — torwards — backwards — backwards — upwards — at the side Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 9 mm 10 mm 9 mm 9 mm 9 mm 9 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • for live parts — forwards — backwards — backwards — backwards — at the side — downwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — backwards — torwards — backwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 10 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 30 mm 9 mm 30 mm 9 mm screw-type terminals
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — torwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 50 mm 30 mm 10 mm 50 mm 10 mm 10 mm 10 mm 10 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — torwards — backwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 50 mm 10 mm 50 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — backwards — to hackwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 9 mm 10 mm screw-type terminals 1 10 mm², 2x (2.5 6 mm²) 1 6 mm²
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — towards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 110 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — the side — downwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 10 mm 9 mm 110
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — the side — downwards — backwards — upwards — the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate according to SN 31920 protection class IP on the front according to IEC 60529	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 10 mm 9 mm 110

For use in hazardous locations

Declaration of Conformity

Confirmation











Test Certificates

Marine / Shipping

Type Test Certificates/Test Report

Special Test Certific-









Marine / Shipping

other

Railway







Confirmation

Vibration and Shock

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2120-1KD24-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2120-1KD24-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-1KD24-0AP


Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RA2120-1KD24-0AP6&lang=en


Characteristic: Tripping characteristics, I²t, Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-1KD24-0AP6/char

Further characteristics (e.g. electrical endurance, switching frequency)
http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2120-1KD24-0AP6&objecttype=14&gridview=view1

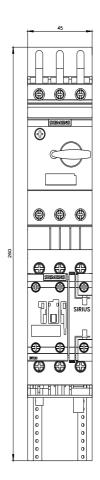

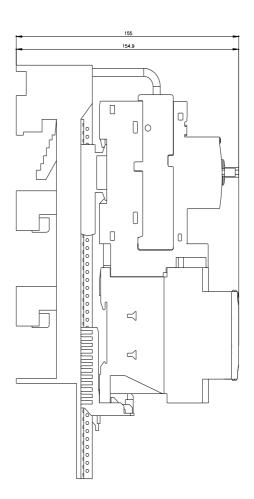

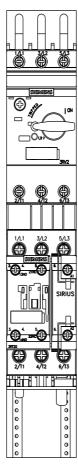

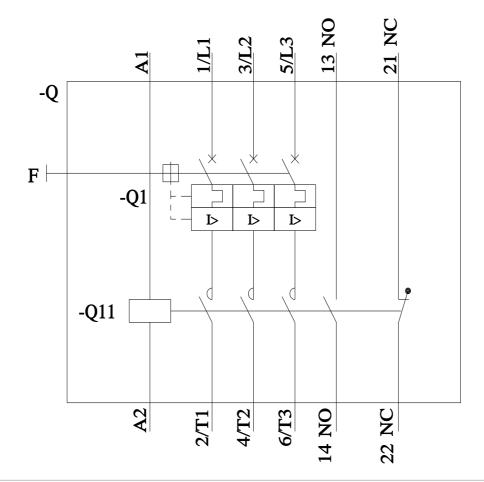

last modified: 12/15/2020 🖸