



MP-Series Electric Cylinders (Series A and B)

Catalog Numbers MPAR-x1xxxB, MPAR-x1xxxE, MPAR-x2xxxC, MPAR-x2xxxF, MPAR-x3xxxE, MPAR-x3xxxH

Topic	Page
About this Publication	1
Catalog Number Explanation	2
About the MP-Series Electric Cylinders	3
Before You Begin	3
Install the Electric Cylinder	5
Mount the Electric Cylinder	7
Change Connector Orientation	8
Dimensions	10
Connector Data	16
Commissioning	16
Maintenance	27
Troubleshooting	28
Accessories	29
Discontinued Mounting Accessories	33
Specifications	44
Additional Resources	48

About this Publication

MPAR-B1xxx and MPAR-B2xxx (series A) electric cylinders were equipped with circular-DIN (threaded) cable connectors. Series B electric cylinders, included in this publication, are equipped with circular-DIN (SpeedTec) cable connectors. MPAR-B3xxx (series A) electric cylinders were already equipped with circular-DIN (SpeedTec) cable connectors and were not affected by this series change.


IMPORTANT Many of the Bulletin MPAR (series A and B) electric cylinder accessory items were discontinued and they are archived in this publication along with the series A and B electric cylinders.

Refer to MP-Series™ Electric Cylinders (Series B and C) Installation Instructions, publication [MPAR-IN001](#), for information regarding MPAR-B1xxx and MPAR-B2xxx (series B) and MPAR-B3xxx (series C) electric cylinders.




Catalog Number Explanation

Catalog numbers consist of various characters, each of which identifies a specific version or option for that component. Use the catalog numbering chart below to understand the configuration of your actuator.

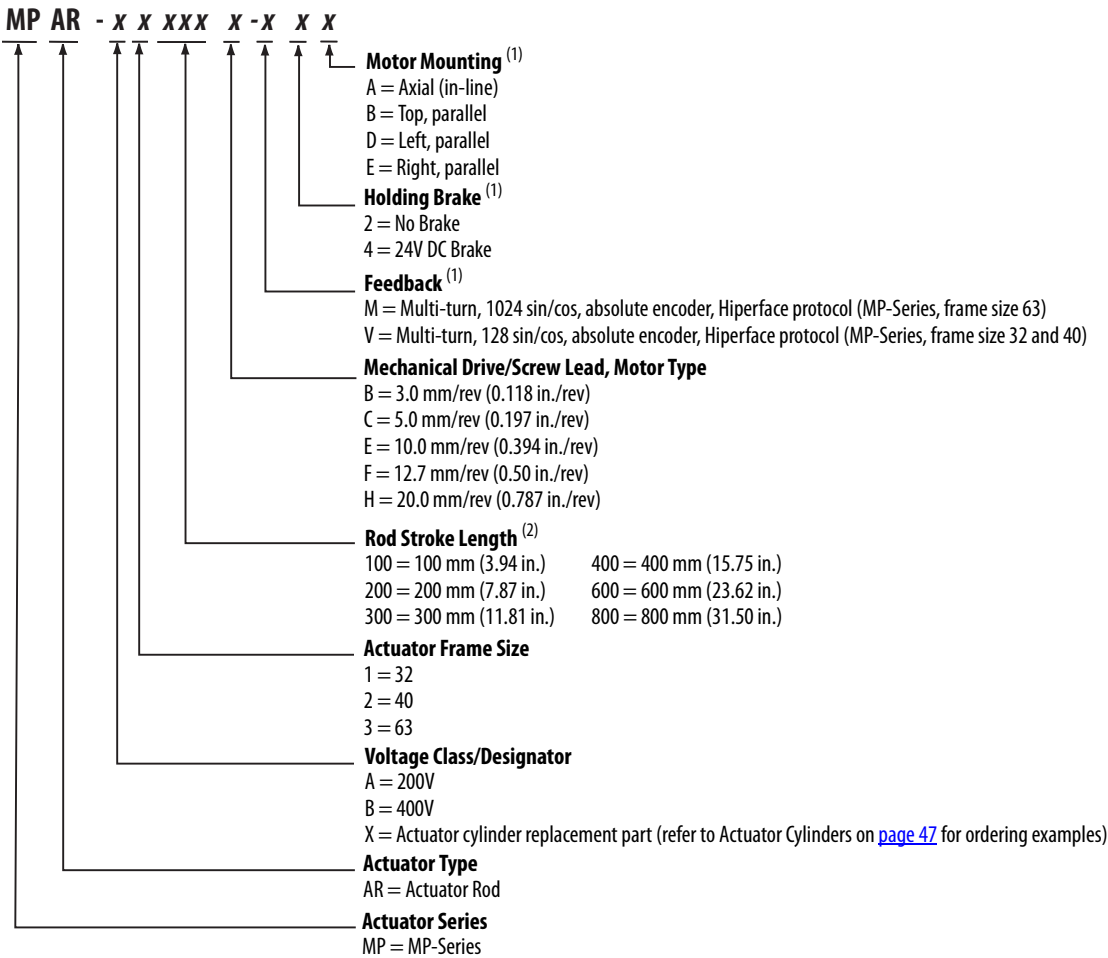

(1) This field does not apply to actuator cylinder replacement parts.

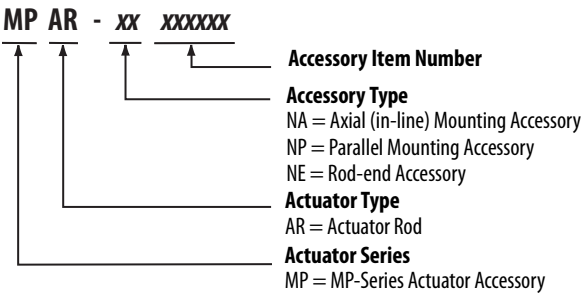


About the MP-Series Electric Cylinders

MP-Series electric cylinders feature multi-turn high resolution encoders and are available with 24V DC brakes. The MP-Series motor rotates a ballscrew drive that converts rotary motion into linear movement. This linear movement results in the piston rod extending and retracting from the electric cylinder housing.

IMPORTANT The MP-A/Bxxxxx-x2x electric cylinders are non-braking. When there is no input torque, the piston rod can be moved freely. You can achieve self-locking of your motion system by using motors with an integrated brake or with high self-braking torque.

The MP-Series electric cylinders have been designed for exact positioning at high speeds.

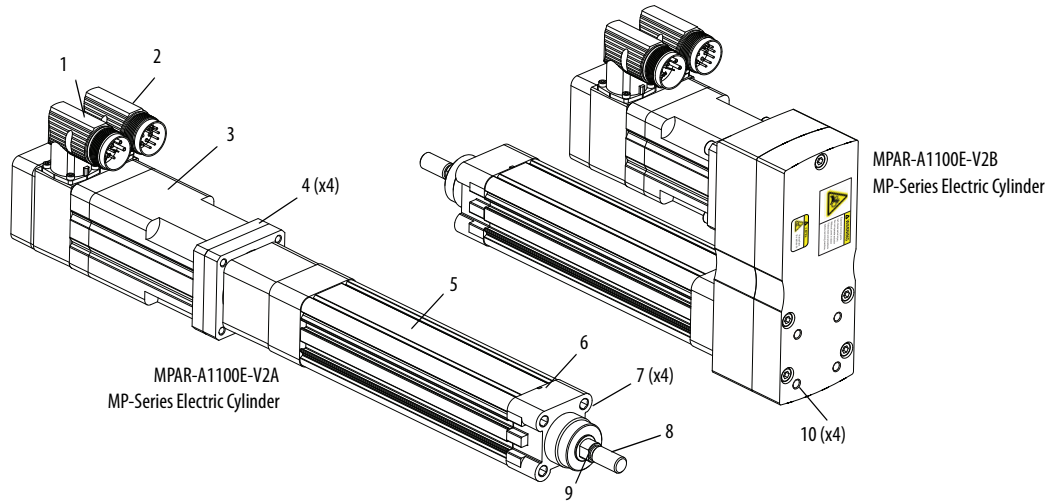

Item	Description
1	Power connector
2	Feedback connector
3	MP-Series motor
4	Motor mounting bolts
5	Actuator cylinder

Item	Description
6	Breather port
7	Hollow bolts with internal treads for fastening
8	Piston rod
9	Wrench flats for counteracting torque on piston rod
10	Accessories mounting holes

Before You Begin

Remove all packing material, wedges, and braces from within and around the item. After unpacking, verify the nameplate catalog number against the purchase order.

1. Remove packaging polyethylene foil and cardboard.
The packing materials are recyclable, except for oiled paper, which is waste.
2. Remove the electric cylinder carefully from its shipping container.
Consider the weight of the electric cylinder. Depending on the design, the electric cylinder can weigh up to 20.6 kg (45.4 lb).
3. Visually inspect the electric cylinder for damage.
4. Examine the electric cylinder frame, piston shaft, and hollow bolts for defects.
5. Notify the carrier of shipping damage immediately.



ATTENTION: Do not attempt to open and modify the electric cylinder beyond changing motor connector orientation as described on [page 8](#). Only a qualified Allen-Bradley employee can service the internal working of the electric cylinder or motor. Failure to observe these safety precautions could result in personal injury or damage to equipment.

Plan the Installation

Refer to the Kinetix® Linear Motion Specifications Technical Data, publication [KNX-TD002](#) and [Specifications](#) on [page 44](#), for the specifications referenced in this section:

- This product can be operated in compliance with the relevant safety regulations only if the maximum loading limits are observed.



ATTENTION: The electric-cylinder is not intended to be used in applications where side-loading occurs. Loads must be guided and supported. Aligned load with the line-of-motion of the piston rod. Side loading will reduce the lifetime of the electric-cylinder.

- If you are mounting your electric cylinder in a vertical or sloping position, include safety measures that will control the workload should the spindle nut fail.



ATTENTION: Uncontrolled moving masses can cause injury or damage to property. If there is a spindle nut fracture inside the actuator cylinder due to wear, the working mass will drop down. Check whether additional external safety measures are required to prevent damage in the event of a spindle nut fracture.

- Corrosive environments reduce the service life of electric cylinders.
- Depending on the workload, the piston rod will bend. Refer to the piston-rod deflection specifications for limitations.
- Motor feedback, auxiliary feedback, and I/O connector kits are not included, but can be purchased separately.
- Factory manufactured feedback and power cables are available in standard cable lengths. They provide environmental sealing and shield termination. Contact your Allen-Bradley sales office or refer to the selection guide for cables.

Electric Cylinders with Brake Option

The brake option on this servo motor is a spring-set holding brake that releases when voltage is applied to the brake coil. A separate power source is required to disengage the brake. This power source can be applied by a servo motor controller or manual operator control.

If system main power fails, holding brakes can withstand occasional use as stopping brakes. However, this creates rotational mechanical backlash that is potentially damaging to the system, increases brake wear, and reduces brake life.

An unpowered electric cylinder will require a brake to maintain its position if the force on the actuator exceeds the Back Drive Force listed in Kinetix Linear Motion Specifications Technical Data, publication [KNX-TD002](#).

A brake can be use with the actuator to keep it from backdriving, typically in vertical applications. A brake may be used for safety reasons or for energy savings allowing the actuator to hold position when unpowered.

IMPORTANT Holding brakes are not designed to stop rotation of the motor shaft, nor are they intended to be used as a safety device. They are designed to hold a motor shaft at 0 rpm for up to the rated brake holding torque.

The recommended method of preventing motor shaft rotation is a four step process: first, command the servo drive to 0 rpm; second, verify the motor is at 0 rpm; third, engage the brake; and fourth, disable the drive.

Disabling the drive removes the potential for brake wear caused by a badly-tuned servo system oscillating the shaft.

Preventing Electrical Noise

Electromagnetic interference (EMI), commonly called electrical noise, can reduce motor performance. Effective techniques to counter EMI include filtering the AC power, using shielded cables, separating signal cables from power wiring, and practicing good grounding techniques.

Follow these guidelines to avoid the effects of EMI:

- Isolate the power transformers or install line filters on all AC input power lines.
- Physically separate signal cables from motor cabling and power wiring. Do not route signal cables with motor and power wires, or over the vent openings of servo drives.
- Ground all equipment by using a single-point parallel ground system that employs ground bus bars or large straps. If necessary, use additional electrical-noise reduction techniques to reduce EMI in noisy environments.

Refer to System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for additional information on reducing the effects of EMI.

Build and Route Cables

Knowledgeable cable routing and careful cable construction improves EMC. Follow these steps to build and install cables.

1. Keep wire lengths as short as physically possible.
2. Route signal cables (encoder, serial, analog) away from motor and power wiring.
3. Separate cables by 0.3 m (1 ft) minimum for every 9 m (30 ft) of parallel run.
4. Ground both ends of the encoder cable shield and twist the signal wire pairs to prevent electromagnetic interference (EMI) from other equipment.



ATTENTION: High voltage can be present on the shield of a power cable if the shield is not grounded. Make sure there is a connection to ground for any power cable shield. Failure to observe these safety precautions could result in personal injury or damage to equipment.

Install the Electric Cylinder

The installation must comply with all local regulations and use of equipment and installation practices that promote electromagnetic compatibility and safety.



ATTENTION: Unmounted electric cylinders, disconnected mechanical couplings, and disconnected cables are dangerous if power is applied. Disassembled equipment should be appropriately identified (tagged-out) and access to electrical power restricted (locked-out). Failure to observe these safety precautions could result in personal injury.



ATTENTION: Make sure that cables are installed and restrained to prevent uneven tension or flexion at the cable connectors. Excessive and uneven lateral force at the cable connectors may result in the connector's environmental seal opening and closing as the cable flexes. Failure to observe these safety precautions could result in damage to the electric cylinder motor and its components.



ATTENTION: Damage may occur to the electric cylinder bearings and the feedback device if a sharp impact to the piston rod is applied during installation. Do not strike the piston rod with tools during installation or removal. Do not attempt to rotate the piston rod during installation. Rotating the piston rod will break the mechanism that allows the electric cylinder to extend and retract. Failure to observe these safety precautions could result in damage to the electric cylinder and its components.

Follow these steps to install the electric cylinder.

1. Provide sufficient clearances in the area of the electric cylinder for it to stay within its specified operating temperature range. Refer to [Environmental Specifications](#) on [page 44](#) for the operating temperature range. Do not enclose the electric cylinder unless forced air is blown across the electric cylinder for cooling. Keep other heat producing devices away from the electric cylinder.

IMPORTANT Position the electric cylinder so that all of the operating parts are accessible and the breather port is not covered.

2. Make sure the mounting surface supports the electric cylinder evenly so that it is free of mechanical stress and distortion.

The evenness of support surface should be ≤ 0.2 mm (0.008 in.).



ATTENTION: Do not modify the settings of the screws and the threaded pins. The electric cylinder must not be fastened by the front cover alone when used with high loads. Heavy tensile strain can cause the screws in the cover to pull out.

3. Attach mounting accessories to the electric cylinder (see [Accessories](#) on [page 29](#)).

Tighten the fastening screws evenly to these torque values.

Attribute	Frame 32	Frame 40	Frame 63
Internal thread of cover screws	M6	M6	M8
Tightening torque, max ⁽¹⁾	5 N·m (3.69 lb·ft)	5 N·m (3.69 lb·ft)	9 N·m (5.90 lb·ft)

(1) Unless otherwise noted, the torque value has a $\pm 20\%$ tolerance.

4. Attach rod-end accessories and the workload.

Be sure the workload center of gravity is centric to the piston rod.



ATTENTION: Damage may occur to the electric cylinder bearings and the feedback device if sharp impact to the piston rod is applied during installation. Do not strike the piston rod with tools during installation or removal.


Failure to observe these safety precautions could result in damage to the electric cylinder and its components.

IMPORTANT

Do not twist or rotate the piston rod. If the piston rod is rotated, the absolute position of the electric cylinder will be lost and the absolute home position must be re-established.

When fastening a rod-end accessory or workload to the piston rod, use two wrenches. Use one wrench to tighten the mounting nut or rod-end accessory and the other, on the piston-rod wrench flats, to counteract the applied torque. Be sure that the torque is not applied to the piston rod and that the piston rod does not rotate.

Frame Size	Piston Rod Thread	Wrench Flats Width
32	M10 x 1.25	10 mm
40	M12 x 1.25	13 mm
63	M16 x 1.5	17 mm

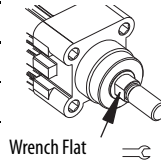

ATTENTION: Do not rotate the piston rod during installation. Rotating the piston rod will break the mechanism that lets the electric cylinder extend and retract. Use two wrenches to install the workload.

Failure to observe these safety precautions could result in damage to the electric cylinder and its components



If you are using a coupling piece attachment, catalog number MPAR-NE3612x, or trunnion mounting kit, catalog number MPAR-NA1635xx, see [page 32](#) for torque values.

If you are using a rod guide accessory, catalog number MPAR-NE34xxx or MPAR-NE150xxx, adjust the guides of the workload and the electric cylinder so that they are exactly parallel. This avoids excessive wear on the guide.

Mount the Electric Cylinder

1. Use stainless steel fasteners to mount your electric cylinder to your application.
2. Attach power and feedback cables after the electric cylinder is mounted, and use a drip loop in the cable to keep liquids away from the connectors.



BURN HAZARD: Outer surfaces of the motor can reach high temperatures, 65 °C (149 °F), during electric cylinder operation. Take precautions to prevent accidental contact with hot surfaces. Failure to observe these safety precautions can result in personal injury.



ATTENTION: Consider electric-cylinder surface temperature when selecting motor-mating connections and cables. Failure to observe these safety precautions can result in personal injury or damage to equipment.



ATTENTION: Keyed connectors must be properly aligned and hand-tightened the recommended number of turns. Improper connector alignment is indicated by the need for excessive force, such as the need for the use of tools, to fully seat connectors. Failure to observe these safety precautions could result in damage to the motor and cable, and their components.

Attach Motor Cables

Follow these steps to attach the power and feedback cables after the electric-cylinder is mounted.



ATTENTION: Consider electric-cylinder surface temperature when selecting motor-mating connections and cables. Failure to observe these safety precautions can result in personal injury or damage to equipment.


1. Carefully align each cable connector with the respective motor connector as shown in the following diagram.



ATTENTION: Keyed connectors must be properly aligned and hand-tightened the recommended number of turns. Improper connector alignment is indicated by the need for excessive force, such as the need for the use of tools, to fully seat connectors. Failure to observe these safety precautions can result in damage to equipment.

IMPORTANT Remove the O-ring from the motor connector.

2. Fully seat the feedback connector and the power/brake connector and hand tighten the collar one-quarter turn.

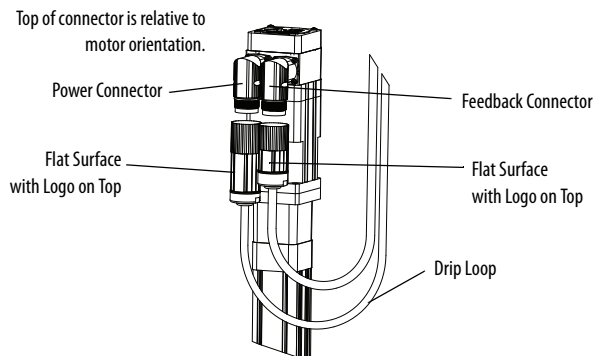

ATTENTION: Make sure that cables are installed and restrained to prevent uneven tension or flexion at the cable connectors. Excessive and uneven lateral force at the cable connectors may result in the connector's environmental seal opening and closing as the cable flexes. Failure to observe these safety precautions can result in damage to the electric-cylinder motor and its components.

3. Form a drip loop in the cable to keep liquids away from the connectors.
4. Verify the continuity and functionality of the thermal switch signals, TS+ and TS-. These signals are transmitted through the feedback cable that connects the motor to its controlling drive.

Change Connector Orientation

You can rotate the circular DIN-connector housings up to 180° in either direction.



ATTENTION: You can rotate the connectors into a fixed position during installation of the electric cylinder and keep them in that position without further adjustment. Strictly limit the applied forces and the number of times the connector is rotated to be sure that connectors meet the requirements of IP66 for the motor portion of the electric cylinder.

Failure to observe these safety precautions can result in damage to the motor and its components.

Follow these steps to rotate the DIN connectors.

1. Mount and fully seat a mating cable on the connector.
2. Grasp the connector and cable plug by their housings and slowly rotate them to the outside of the motor.

If necessary, repeat this step for each connector (feedback or power/brake).



ATTENTION: Apply force only to the connectors; do not apply force to the cable. Do not use tools, for example, pliers and vise-grips, to assist with the rotation of the connector.

Failure to observe these safety precautions can result in personal injury or damage to equipment.

Notes:



MP-Series Electric Cylinder Dimensions (in-line configuration, frame 32)

Electric Cylinder Cat. No.	L7 ⁽¹⁾ mm (in.)	LB ⁽¹⁾ mm (in.)	LE ⁽²⁾ mm (in.)	P mm (in.)	AD mm (in.)	HD mm (in.)	AM mm (in.)	G mm (in.)	G1 mm (in.)	L1 mm (in.)	L2 mm (in.)	Z1 ⁽³⁾ mm (in.)	VD mm (in.)	WH mm (in.)	E mm (in.)	TG mm (in.)
MPAR-x1100B-V2A	445.7 (17.55)															
MPAR-x1200B-V2A	545.7 (21.48)	126.5 (4.98)	52.4 (2.06)													
MPAR-x1300B-V2A	645.7 (25.42)															
MPAR-x1400B-V2A	745.7 (29.36)															
MPAR-x1100E-V2A	470.7 (18.53)			55.0 (2.17)	66.5 (2.62)	94.0 (3.70)	22.0 (0.87)	24.0 (0.94)	26.0 (1.02)	18.0 (0.71)	122.0 (4.80)	148.0 (5.83)	10.0 (0.39)	26.0 (1.02)	45.5 (1.79)	32.5 (1.28)
MPAR-x1200E-V2A	570.7 (22.47)	151.5 (5.96)	77.2 (3.04)													
MPAR-x1300E-V2A	670.7 (26.41)															
MPAR-x1400E-V2A	770.7 (30.34)															

(1) If ordering MPAR-A/B1xxxx-V4A actuator with brake, add 36.1 mm (1.42 in.) to dimensions L7 and LB.


(2) If ordering MPAR-A/B1xxxx-V4A actuator with brake, add 33.4 mm (1.31 in.) to dimension LE.

(3) The tolerance for this dimension is ± 1.0 mm (0.039 in.).**MP-Series Electric Cylinder Dimensions (parallel configuration, frame 32)**

Electric Cylinder Cat. No.	L71 mm (in.)	LC mm (in.)	HC mm (in.)	C ⁽¹⁾ mm (in.)	GC mm (in.)	PW mm (in.)
MPAR-x1100B-V2B/D/E	326.0 (12.8)					
MPAR-x1200B-V2B/D/E	426.0 (16.8)					
MPAR-x1300B-V2B/D/E	526.0 (20.7)					
MPAR-x1400B-V2B/D/E	626.0 (24.6)	56.0 (2.20)	157 (6.18)	92.5 (3.64)	27.5 (1.08)	60.0 (2.36)
MPAR-x1100E-V2B/D/E	326.0 (12.8)					
MPAR-x1200E-V2B/D/E	426.0 (16.8)					
MPAR-x1300E-V2B/D/E	526.0 (20.7)					
MPAR-x1400E-V2B/D/E	626.0 (24.6)					

(1) The tolerance for this dimension is ± 1.0 mm (0.039 in.).

MP-Series Electric Cylinders Dimensions (frame 40)

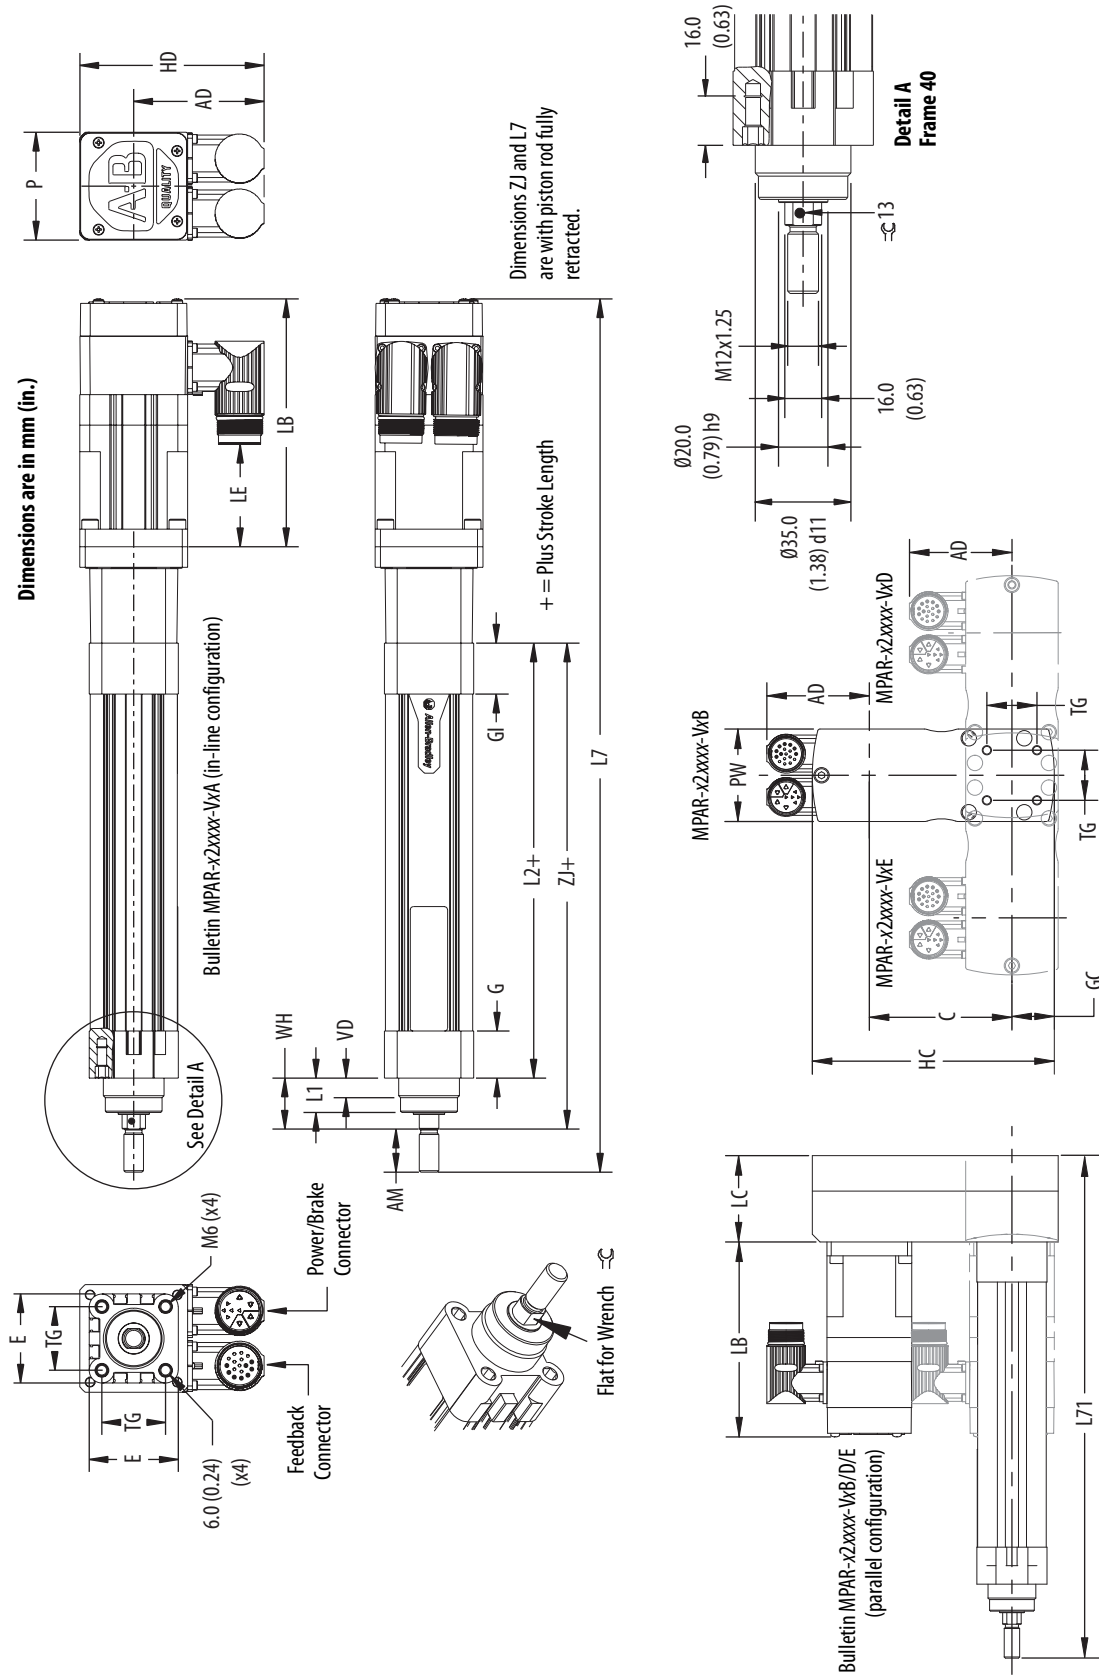

MP-Series Electric Cylinder Dimensions (in-line configuration, frame 40)

Electric Cylinder Cat. No.	L7 ⁽¹⁾ mm (in.)	LB ⁽¹⁾ mm (in.)	LE ⁽²⁾ mm (in.)	P mm (in.)	AD mm (in.)	HD mm (in.)	AM mm (in.)	G mm (in.)	G1 mm (in.)	L1 mm (in.)	L2 mm (in.)	ZJ ⁽³⁾ mm (in.)	VD mm (in.)	WH mm (in.)	E mm (in.)	TG mm (in.)
MPAR-x2100C-V2A	501.2 (19.73)															
MPAR-x2200C-V2A	601.2 (23.67)															
MPAR-x2300C-V2A	701.2 (27.61)	151.5 (5.96)	77.2 (3.04)	55.0 (2.17)	66.5 (2.62)	94.0 (3.70)										
MPAR-x2400C-V2A	801.2 (31.54)															
MPAR-x2600C-V2A	1001.2 (39.42)						24.0 (0.94)	28.5 (1.12)	30.0 (1.18)	21.5 (0.85)	146.5 (5.77)	176.5 (6.95)	10.5 (0.41)	30.0 (1.18)	54.0 (2.13)	38.0 (1.50)
MPAR-x2100F-V2A	492.1 (19.37)															
MPAR-x2200F-V2A	592.1 (23.31)															
MPAR-x2300F-V2A	692.1 (27.25)	140.1 (5.52)	65.1 (2.56)	70.0 (2.76)	74.0 (2.91)	109.0 (4.29)										
MPAR-x2400F-V2A	792.1 (31.19)															
MPAR-x2600F-V2A	992.1 (39.06)															

(1) If ordering MPAR-A/B2xxxC-V4A actuator with brake, add 36.1 mm (1.42 in.) to dimensions L7 and LB.

If ordering MPAR-A/B2xxxF-V4A actuator with brake, add 39.0 mm (1.54 in.) to dimensions L7 and LB.

(2) If ordering MPAR-A/B2xxxC-V4A actuator with brake, add 33.4 mm (1.31 in.) to dimension LE.

If ordering MPAR-A/B2xxxF-V4A actuator with brake, add 24.7 mm (0.97 in.) to dimension LE.

(3) The tolerance for this dimension is ± 1.0 mm (0.039 in.).**MP-Series Electric Cylinder Dimensions (parallel configuration, frame 40)**

Electric Cylinder Cat. No.	L71 mm (in.)	LC mm (in.)	HC mm (in.)	C ⁽¹⁾ mm (in.)	GC mm (in.)	PW mm (in.)
MPAR-x2100C-V2B/D/E	356.5 (14.03)					
MPAR-x2200C-V2B/D/E	456.5 (17.97)					
MPAR-x2300C-V2B/D/E	556.5 (21.91)	56.0 (2.20)	157.0 (6.18)	91.5 (3.60)	27.0 (1.06)	60.0 (2.36)
MPAR-x2400C-V2B/D/E	656.5 (25.84)					
MPAR-x2600C-V2B/D/E	856.5 (33.72)					
MPAR-x2100F-V2B/D/E	369.5 (14.55)					
MPAR-x2200F-V2B/D/E	469.5 (18.48)					
MPAR-x2300F-V2B/D/E	569.5 (22.42)	69.0 (2.72)	188.5 (7.42)	102.5 (4.03)	38.0 (1.50)	86.0 (3.38)
MPAR-x2400F-V2B/D/E	669.5 (26.36)					
MPAR-x2600F-V2B/D/E	869.5 (34.23)					

(1) The tolerance for this dimension is ± 1.0 mm (0.039 in.).

Actuators are designed to metric dimensions. Inch dimensions are approximate conversions from millimeters. Dimensions without tolerances are for reference.



MP-Series Electric Cylinder Dimensions (in-line configuration, frame 63)

Electric Cylinder Cat. No.	L7 ⁽¹⁾ mm (in.)	LB ⁽¹⁾ mm (in.)	LE ⁽¹⁾ mm (in.)	P mm (in.)	AD mm (in.)	HD mm (in.)	AM mm (in.)	G mm (in.)	G1 mm (in.)	L1 mm (in.)	L2 mm (in.)	ZJ ⁽²⁾ mm (in.)	VD mm (in.)	WH mm (in.)	E mm (in.)	TG mm (in.)
MPAR-x3100E-M2A	603.8 (23.77)															
MPAR-x3200E-M2A	703.8 (27.71)															
MPAR-x3300E-M2A	803.8 (31.65)	178.8 (7.04)	121.5 (4.78)	89.4 (3.52)	80.9 (3.19)	125.7 (4.95)										
MPAR-x3400E-M2A	903.8 (35.58)															
MPAR-x3600E-M2A	1103.8 (43.46)															
MPAR-x3800E-M2A	1303.8 (51.33)															
MPAR-x3100H-M2A	574.8 (22.63)						32.0 (1.26)	34.0 (1.34)	36.0 (1.42)	28.5 (1.12)	177.0 (6.97)	214.0 (8.43)	15.0 (0.59)	37.0 (1.46)	75.5 (2.97)	56.5 (2.22)
MPAR-x3200H-M2A	674.8 (26.57)															
MPAR-x3300H-M2A	774.8 (30.50)	149.8 (5.90)	92.5 (3.64)	98.3 (3.87)	83.9 (3.30)	132.8 (5.23)										
MPAR-x3400H-M2A	874.8 (34.44)															
MPAR-x3600H-M2A	1074.8 (42.31)															
MPAR-x3800H-M2A	1274.8 (50.19)															

(1) If ordering MPAR-A/B3xxE-M4A actuator with brake, add 34.5 mm (1.36 in.) to dimensions L7, LB, and LE.

If ordering MPAR-A/B3xxH-M4A actuator with brake, add 48.5 mm (1.91 in.) to dimensions L7, LB, and LE.

(2) The tolerance for this dimension is ± 1.0 mm (0.039 in.).**MP-Series Electric Cylinder Dimensions (parallel configuration, frame 63)**

Electric Cylinder Cat. No.	L71 mm (in.)	LC mm (in.)	HC mm (in.)	C ⁽¹⁾ mm (in.)	GC mm (in.)	PW mm (in.)
MPAR-x3100E-M2B/D/E	428.0 (16.85)					
MPAR-x3200E-M2B/D/E	528.0 (20.79)					
MPAR-x3300E-M2B/D/E	628.0 (24.72)					
MPAR-x3400E-M2B/D/E	728.0 (28.66)					
MPAR-x3600E-M2B/D/E	928.0 (36.53)					
MPAR-x3800E-M2B/D/E	1128.0 (44.41)					
MPAR-x3100H-M2B/D/E	428.0 (16.85)	82.0 (3.23)	225.0 (8.86)	120.0 (4.72)	45.0 (1.77)	110.0 (4.33)
MPAR-x3200H-M2B/D/E	528.0 (20.79)					
MPAR-x3300H-M2B/D/E	628.0 (24.72)					
MPAR-x3400H-M2B/D/E	728.0 (28.66)					
MPAR-x3600H-M2B/D/E	928.0 (36.53)					
MPAR-x3800H-M2B/D/E	1128.0 (44.41)					

(1) The tolerance for this dimension is ± 1.0 mm (0.039 in.).

Connector Data


This table lists the signal descriptions for feedback, power, and brake connector pins on the electric cylinder.

Feedback		
Pin	Signal Name MPAR-Axxxxx (200V class)	Signal Name MPAR-Bxxxxx (400V class)
1	Sin+	Sin+
2	Sin-	Sin-
3	Cos+	Cos+
4	Cos-	Cos-
5	Data+	Data+
6	Data-	Data-
7	Reserved	Reserved
8		
9		
10	Common	
11	Reserved	+9V DC
12		Common
13	TS+	TS+
14	TS-	TS-
15	Reserved	Reserved
16		
17		
Case	Shield	Shield

Power and Brake	
Pin	Signal Name
A	Phase U ⁽¹⁾
B	Phase V ⁽¹⁾
C	Phase W ⁽¹⁾
D	Ground ⁽¹⁾
E	Reserved ⁽¹⁾
F	MBRK+ ^{(1) (2)}
G	MBRK- ^{(1) (2)}
H	Reserved
L	
Case	Cable shield and GND



Intercontec P/N
BEDC0091NN00000217000

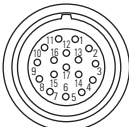

Intercontec P/N
AEDC113NN00000222000

(1) Power pins A, B, C, and D may be labeled as U, V, W, and GND respectively. Brake pins F and G may be labeled as + and - respectively. Reserved pins E and H may be numbered 1 or 2.

(2) Brake+ and Brake- are available only on electric cylinders with a brake.



ATTENTION: Be sure that cables are installed and restrained to prevent uneven tension or flexion at the cable connectors. Excessive and uneven force at the cable connector may result in damage to the housing and contacts as the cable flexes. Failure to observe these safety precautions can result in damage to the motor and its components.

Mating Cables

Connector	Cable Type	Cable Cat. No.
Feedback	Premolded	2090-CFBM7DD-CEAAxx (standard) or 2090-CFBM7DD-CEAFxx (continuous-flex)
	Flying lead	2090-CFBM7DF-CEAAxx (standard) or 2090-CFBM7DF-CEAFxx (continuous-flex)
Power	With brake wires	2090-CPBM7DF-xxAAxx (standard) or 2090-CPBM7DF-xxAFxx (continuous-flex)
	Without brake wires	2090-CPWM7DF-xxAAxx (standard) or 2090-CPWM7DF-xxAFxx (continuous-flex)

Commissioning

This section provides guidelines for using RSLogix™ 5000 software to configure your electric-cylinder servo drive system.

Required Files

Firmware revisions and software versions required to support the electric cylinders include the following:

- Kinetix 2000 or Kinetix 6000 multi-axis drives
 - RSLogix 5000® software, version 16.00 or later
 - Firmware revision 1.96 or later
 - For RSLogix 5000 software, version 16.xx, use Motion Database file, version 4_23_0 or later
 - For RSLogix 5000 software, version 17.xx or later, use Motion Database file, version 5_15_0 or later
- Kinetix 6200 multi-axis drives
 - Firmware revision 1.30 or later
 - For RSLogix 5000 software, version 17.xx, use MPAR_5_19_11.cmf or later
- Kinetix 6500 multi-axis drives
 - Firmware revision 1.11 or later
 - For RSLogix 5000 software, version 18.xx, use MPAR_5_19_11.cmf or later
- Kinetix 300 single-axis drives
 - For RSLogix 5000 software, version 17.xx or later
 - use Kinetix 300 drive MotionView OnBoard web interface
- Kinetix 350 single-axis Ethernet drives
 - RSLogix 5000 software, version 20.xx or later
 - Firmware revision 1.30 or later
- Ultra™3000 drives
 - Firmware revision 1.52 or later
 - Motion Database (.mdb) file, dated April 2010 or later
- Motion Analyzer software, version 4.7 or later

Download these files from <http://www.rockwellautomation.com/support>. Contact Rockwell Automation Technical Support at (440) 646-5800 for assistance.

Configure Your Electric Cylinder

Configure the electric-cylinder by using the basic parameter settings described in this section. Use the procedure appropriate for your motion axis.

Drive	Refer to:
Kinetix 350 Kinetix 2000 Kinetix 6000 Kinetix 6200 Kinetix 6500	Configure Your Electric Cylinder with RSLogix 5000 Software and Tune Your Electric Cylinder with RSLogix 5000 Software on page 21 .
Ultra3000	Configure Your Electric Cylinder with Ultraware Software on page 24 .
Kinetix 300	Maintenance on page 27 .



ATTENTION: Moving parts can cause injuries. Before running the electric cylinder, make sure all components are secure and safeguards are in place to prevent access to the path of moving machinery. Safeguards should prevent access to the electric cylinder until all motion has stopped. Check that the electric cylinder is clear of foreign matter and tools. Objects hit by the moving piston rod can become projectiles that can cause personal injury or damage to the equipment.

IMPORTANT It is your responsibility to verify that the servo control system safely controls the electric cylinder with regard to maximum force, acceleration, and speed.

Configure Your Electric Cylinder with RSLogix 5000 Software

Use the following procedure to configure the drive for your electric-cylinder.

The procedure assumes the electric-cylinder and the Kinetix 350, Kinetix 2000, Kinetix 6000, Kinetix 6200, or Kinetix 6500 servo drive are installed and wired as one axis of the motion system.



ATTENTION: Incorrect parameter settings may result in uncontrolled motion with the potential for damage to the electric cylinder. Initiating a motion command on an electric cylinder with an incorrect Position mode setting may result in damage to the electric cylinder and the machine in which it is installed.

1. Enter these parameters in the Axis Properties tabs of RSLogix 5000 software for the electric cylinder.

Axis Properties Tab	Parameter	Entry/Selection
Drive/Motor	Motor Catalog Number	Select one from the list MPAR-A1xxxB-V2x MPAR-B1xxxB-V2x MPAR-A1xxxB-V4x MPAR-B1xxxB-V4x MPAR-A1xxxE-V2x MPAR-B1xxxE-V2x MPAR-A1xxxE-V4x MPAR-B1xxxE-V4x MPAR-A2xxxC-V2x MPAR-B2xxxC-V2x MPAR-A2xxxC-V4x MPAR-B2xxxC-V4x MPAR-A2xxxF-V2x MPAR-B2xxxF-V2x MPAR-A2xxxF-V4x MPAR-B2xxxF-V4x MPAR-A3xxxE-M2x MPAR-B3xxxE-M2x MPAR-A3xxxE-M4x MPAR-B3xxxE-M4x MPAR-A3xxxH-M2x MPAR-B3xxxH-M2x MPAR-A3xxxH-M4x MPAR-B3xxxH-M4x
	Drive Resolution	200,000
	Drive Counts per	Motor Rev

Axis Properties Tab	Parameter	Entry/Selection (with applicable distance unit settings)	
		Metric	English
Conversion	Positioning Mode	Linear Setting the Positioning Mode to Rotary can cause damage to the electric cylinder or the machine due to incorrect positioning	
	Conversion Constant	66666.667 drive cnts/1.0 mm for	1693333.3 drive cnts/1.0 in. for
		MPAR-x1xxxB-V2x MPAR-x1xxxB-V4x	
	Conversion Constant	20000 drive cnts/1.0 mm for	508000 drive cnts/1.0 in. for
		MPAR-x1xxxE-V2x MPAR-x1xxxE-V4x MPAR-x3xxxE-M2x MPAR-x3xxxE-M4x	
		40000 drive cnts/1.0 mm for	1016000 drive cnts/1.0 in. for
		MPAR-x2xxxC-V2x MPAR-x2xxxC-V4x	
	Conversion Constant	15748.0315 drive cnts/1.0 mm for	400000 drive cnts/1.0 in. for
		MPAR-x2xxxF-V2x MPAR-x2xxxF-V4x	
	Conversion Constant	10000 drive cnts/1.0 mm for	254000 drive cnts/1.0 in. for
		MPAR-x3xxxH-M2x MPAR-x3xxxH-M4x	

Axis Properties Tab	Parameter	Entry/Selection (with applicable distance unit settings)	
		Metric	English
Dynamics	Maximum Speed ⁽¹⁾	150 mm/s (default 157.5 mm/s)	5.91 in/s (default 6.20 in/s)
		MPAR-x1xxxB-xxx	
		500 mm/s (default 525 mm/s)	19.68 in/s (default 20.67 in/s)
		MPAR-x1xxxE-xxx	
		250 mm/s (default 262.5 mm/s)	9.82 in/s (default 10.33 in/s)
		MPAR-x2xxxC-xxx	
		640 mm/s (default 672 mm/s)	24.61 in/s (default 25.84 in/s)
		MPAR-x2xxxF-xxx	
		500 mm/s (default 525 mm/s)	19.68 in/s (default 20.67 in/s)
		MPAR-x3xxxE-xxx	
		1000 mm/s (default 1050 mm/s)	41.34 in/s (default 43.41 in/s)
		MPARx3xxxH-xxx	
	Maximum Acceleration ⁽²⁾	6000 mm/s/s	236.22 in/s/s
	Maximum Deceleration ⁽²⁾	6000 mm/s/s	236.22 in/s/s
	Maximum Acceleration Jerk	Use default values, or adjusted for your application	
	Maximum Deceleration Jerk	Use default values, or adjusted for your application	

(1) The default value is 5% more than your actuator-rated maximum speed. Do not command maximum speed in your application in excess of the rated speed.

(2) Accelerations in excess of these values may lead to reduction of the life of your actuator.

- Click the Homing tab.
- Set parameters for either absolute homing or torque level-to-marker homing as shown on this table.

Parameter	Absolute Homing Value	Torque Level-to-marker Homing Value
Mode	Absolute	Active
Position	0, typical	0, typical
Offset	N/A	0 mm
Sequence	Immediate	Torque level-to-marker
Direction	N/A	Reverse bidirectional
Torque Level	N/A	30%, min Greater if the system friction, force, or weight exceeds 30% of the Continuous Force Rating at any point in the range of motion.
Speed	N/A	10 mm/s (1.97 in/s)
Return Speed	N/A	10 mm/s (0.39 in/s)



ATTENTION: Avoid excessive force while homing the electric cylinder. Do not exceed 10 mm/s (0.4 in/s) during a home routine. Speeds greater than 10 mm/s (0.4 in/s) may damage the electric cylinder when the piston rod reaches the end of travel.

- Complete these steps for absolute homing.
 - Use motion direct commands to slowly jog your axis to your application's home location, being sure to not exceed 10 mm/s (0.4 in/s).
 - Issue the Motion Direct Command (MAH) to set the home position on your axis.
- Click the Limits tab.

6. Enter these parameters.

Parameter	Entry/Selection (with applicable distance unit settings)
Hard Travel Limits	Check if hardware limits are in use. Use Motion Analyzer to determine the maximum stopping distance in your application to set negative and positive limits.
Soft Travel Limits	Check if software limits are in use. Use Motion Analyzer to determine the maximum stopping distance in your application to set negative and positive limits.
Maximum Positive	Enter value that is within the piston-rod mechanical travel.
Maximum Negative	Enter value that is within the piston-rod mechanical travel.

7. Set overtravel limits according to the maximum speed of the servo drive system and the payload of the application.

IMPORTANT Set travel limits and direction of tuning moves in reference to piston-rod starting position. Leave adequate travel for the piston rod to complete its moves while tuning.



ATTENTION: Software overtravel must be set prior to initiating the tuning process. Check the starting position of the piston rod and allow for adequate travel. Insufficient travel while auto tuning will trigger the software overtravel or cause an end-stop impact.

ATTENTION: Care should be taken to not exceed the physical travel limits of the electric cylinder. Doing so will cause the electric cylinder to reach the mechanical end of stroke. An impact at the end of stroke can physically damage the screw and internal components of the electric cylinder.

You can determine the deceleration distance before the piston rod contacts the end of travel based on the deceleration rate of the load, and the available peak force from the motor/ballscrew combination. Use [Motion Analyzer](#) to calculate the minimum deceleration distance at the maximum speed of your application.

IMPORTANT Do not exceed the maximum energy specified for end-of-travel impacts.

Cat. No.	Impact Energy, max
MPAR-x1xxxx-xxx	0.0001 J
MPAR-x2xxxx-xxx	0.0002 J
MPAR-x3xxxx-xxx	0.0004 J

Maximum Velocity for End-stop Impact with No Load

Cat. No.	Extended Mass g (oz)	Impact Velocity, max mm/s (in/s)
MPAR-x1100B-xxx	239 (8.4)	28.9 (1.14)
MPAR-x1200B-xxx	308 (10.8)	25.5 (1.00)
MPAR-x1300B-xxx	377 (13.9)	23.0 (0.91)
MPAR-x1400B-xxx	446 (15.7)	21.2 (0.83)
MPAR-x1100E-xxx	269 (9.5)	27.3 (1.07)
MPAR-x1200E-xxx	338 (11.9)	24.3 (0.96)
MPAR-x1300E-xxx	407 (14.36)	22.2 (0.87)
MPAR-x1400E-xxx	476 (16.8)	20.5 (0.81)
MPAR-x2100C-xxx	399 (14.1)	31.7 (1.25)
MPAR-x2200C-xxx	488 (17.2)	28.6 (1.12)
MPAR-x2300C-xxx	577 (20.4)	26.3 (1.03)
MPAR-x2400C-xxx	666 (23.5)	24.5 (0.96)
MPAR-x2600C-xxx	844 (29.8)	21.8 (0.86)
MPAR-x2100F-xxx	469 (16.5)	29.2 (1.15)
MPAR-x2200F-xxx	558 (19.7)	26.8 (1.05)
MPAR-x2300F-xxx	647 (22.82)	24.9 (0.98)
MPAR-x2400F-xxx	736 (26.0)	23.3 (0.92)

Maximum Velocity for End-stop Impact with No Load (Continued)

Cat. No.	Extended Mass g (oz)	Impact Velocity, max mm/s (in/s)
MPAR-x2600F-xxx	914 (32.2)	20.9 (0.82)
MPAR-x3100E-xxx	938 (33.1)	29.2 (1.15)
MPAR-x3200E-xxx	1066 (37.6)	27.4 (1.08)
MPAR-x3300E-xxx	1194 (42.1)	25.9 (1.02)
MPAR-x3400E-xxx	1322 (46.6)	24.6 (0.97)
MPAR-x3600E-xxx	1578 (55.7)	22.5 (0.86)
MPAR-x3800E-xxx	1834 (64.7)	20.9 (0.82)
MPAR-x3100H-xxx	938 (33.1)	29.2 (1.149)
MPAR-x3200H-xxx	1066 (37.6)	27.4 (1.08)
MPAR-x3300H-xxx	1194 (42.1)	25.9 (1.02)
MPAR-x3400H-xxx	1322 (46.6)	24.6 (0.97)
MPAR-x3600H-xxx	1578 (55.7)	22.5 (0.88)
MPAR-x3800H-xxx	1834 (64.7)	20.9 (0.82)

IMPORTANT Absolute position is maintained while the motor feedback cable is connected to the drive. If the cable is disconnected or if a motor fault is reported by the drive, the absolute home position must be re-established.

Tune Your Electric Cylinder with RSLogix 5000 Software

This section shows the steps to tune electric cylinders with RSLogix 5000 software, version 16:


- Tuning your electric cylinder requires you to calculate and configure the loop gain based on the actual measured inertia.
- By setting travel limits, your application minimum deceleration is defined.

Follow these steps to tune your electric cylinder.

1. In the Axis Properties dialog box, click the Fault Actions tab.
2. Click Set Custom Stop Action.

TIP These parameter settings work best if the electric cylinder is installed in a horizontal (table top) or a wall mount (vertical) orientation.

3. In the Custom Stop Action Attributes dialog box, set the Brake Engage and the Brake Release delay times to the values listed in [Brake Specifications](#) on [page 45](#).
4. Reduce the default Stopping Time Limit from 10 seconds to 0.5 seconds.

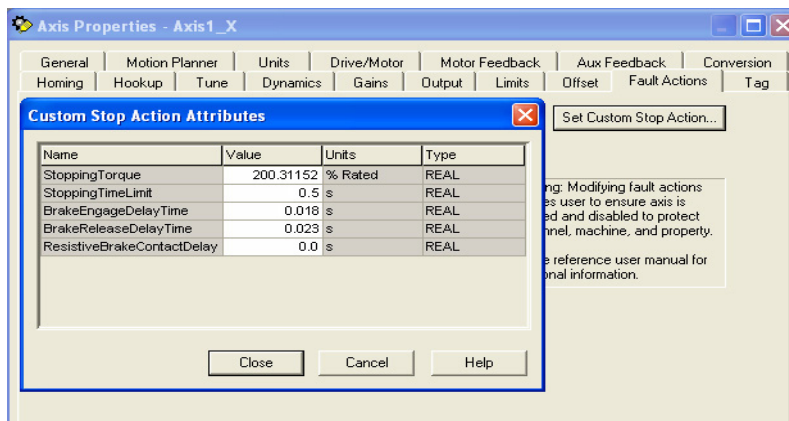

IMPORTANT To prevent the rod from moving or falling when installed in a vertical orientation, the Stopping Time Limit must be set to 0.99 seconds or less.

5. Click the Tune tab and enter these parameters:


- Travel Limit - Set to within software limits
- Speed (velocity)
- Torque/Force

IMPORTANT Set travel limits and direction of tuning moves in reference to the piston-rod starting position. Leave adequate travel for the piston rod to complete its moves while tuning.




ATTENTION: Software overtravel must be set prior to initiating the tuning process. Check the piston-rod starting position and allow for adequate travel. Insufficient travel while auto tuning will trigger the software overtravel or cause an end-stop impact.

IMPORTANT Check Torque Offset only if the electric cylinder is installed in a non-horizontal mount position.

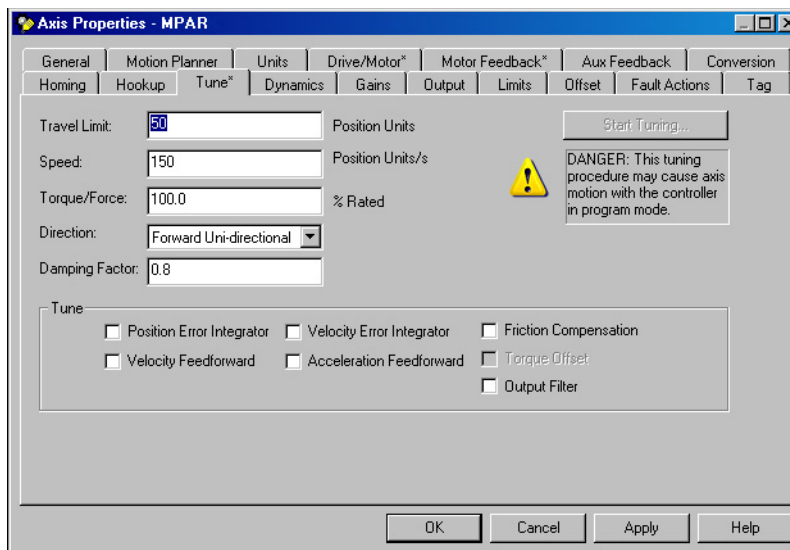


6. Click Start Tuning to access the Motion Initiation dialog box.

7. Click Yes to begin tuning the electric cylinder.

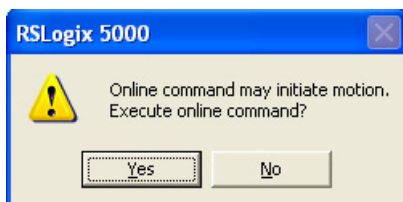


ATTENTION: Motion occurs immediately after clicking Yes.

Tuning is complete when the Tune Servo dialog box opens.

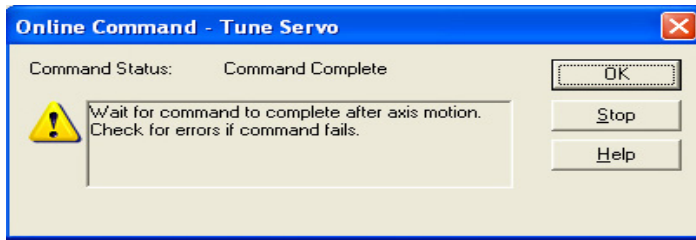

8. Click OK to exit Tuning.

The Tune Results dialog box opens.

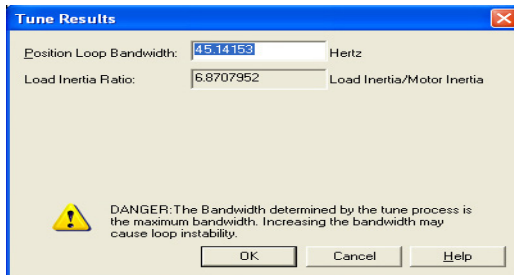

9. If you are satisfied with the tuning results, click OK; otherwise, continue with [Calculate and Configure the Loop Gain](#).

Calculate and Configure the Loop Gain

Calculate a position loop bandwidth based on the actual measured inertia values from the Tune Results dialog box.


In this example, the Tune Results dialog box shows a default Position Loop Bandwidth of 45.14153 Hz and a Load Inertia Ratio of 6.8707952.

1. Calculate the Corrected Position Bandwidth.

Corrected Position Loop Bandwidth = (Initial Position Loop Bandwidth Result / (Initial Load Inertia Ratio Result + 1))

For example, $5.73532 = 45.14153 / 7.8707952$.

2. Enter the Corrected Position Bandwidth value 5.73532 as the Position Loop Bandwidth.
3. Click OK.

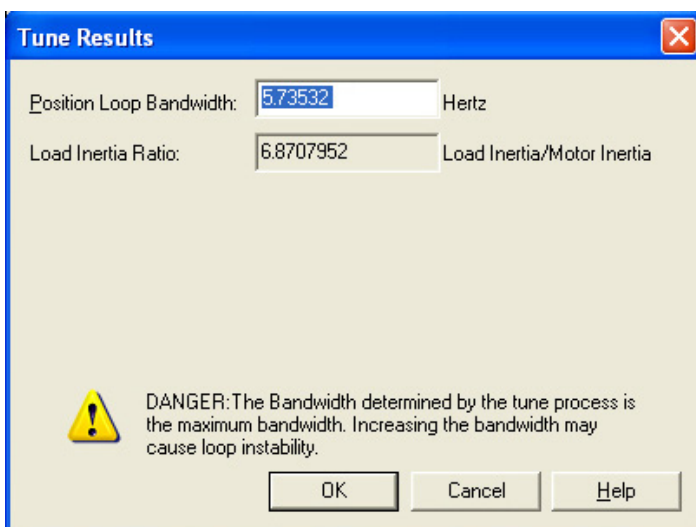

4. Answer the remaining dialog boxes to apply the values.

The proper Position Bandwidth results in a stable starting point from which you can adjust the gains to fit your application requirements.

Configure Your Electric Cylinder with Ultraware Software

These steps assume that an electric cylinder and an Ultra3000 drive are installed and wired as one axis of a motion system.

For help using Ultraware software as it applies to setting up your electric cylinder, refer to [Additional Resources](#) on [page 48](#). This procedure assumes that you are familiar with Ultraware software.

1. Connect a serial cable, catalog number 2090-DAPC-D09xx, to the CN3 connector on your Ultra3000 drive.
2. Apply AC input power to the Ultra3000 drive.

When communication with the Ultra3000 drive is established, the Ultra3000 Motor Database dialog box opens.

3. Click Cancel.

Ultraware software begins scanning for online drives. When a drive is found, an Online Drive icon opens in the Workspace.

4. Double-click the Online Drive icon to view the main Drive Set-up dialog box.
5. Verify that the data in the Model Field is correct for your electric cylinder.
6. From the Displayed Units pull-down menu, choose User.

This programs Ultraware software to make distance moves in User Units (mm or in.).

7. Expand the Motor Encoder Units menu and enter the appropriate values from the table.

The drive default User Units are in motor revolutions. The table converts the displayed User Units into units used for linear motion, either millimeters or inches.

Accelerations in excess of 6000 mm/s/s (236.2 in/s/s) may shorten the life of your actuator. Use the values in this table to limit the acceleration and deceleration of your actuators to 6000 mm/s/s (236.2 in/s/s).

Cat. No.	Screw mm/rev (in/rev)	Encoder periods/rev	Velocity Scale mm/s (in/s)	Position Scale mm (in.)	Acceleration Scale mm/s/s (in/s/s)
MPAR-x1xxxB	3.0 (0.12)	128	43690.67 (1109742.93)	43960.67 (1116601.02)	43960.67 (1116601.02)
MPAR-x1xxxE	10.0 (0.39)	128	13107.20 (332922.88)	13107.20 (332922.88)	13107.20 (332922.88)
MPAR-x2xxxC	5.0 (0.20)	128	26214.40 (665845.76)	26214.40 (665845.76)	26214.40 (665845.76)
MPAR-x2xxxF	12.7 (0.50)	128	10320.63 (262144.00)	10320.63 (262144.00)	10320.63 (262144.00)
MPAR-x3xxxE	10.0 (0.39)	1024	104857.60 (2663383.04)	104857.60 (2663383.04)	104857.60 (2663383.04)
MPAR-x3xxxH	20.0 (0.79)	1024	52428.80 (1331691.52)	52428.80 (1331691.52)	52428.80 (1331691.52)

Configure the Kinetix 300 Drive for Electric Cylinders

These steps assume that an electric cylinder and the Kinetix 300 drive are installed and wired as one axis of a motion system.

For help using the Kinetix 300 drive as it applies to setting up your electric cylinder, refer to [Additional Resources](#) on [page 48](#). This procedure assumes that you are familiar with the Kinetix 300 drive.

1. Run MotionView OnBoard software.
2. From the Drive Organizer, click Motor.
3. Verify that your electric cylinder model is displayed in the Motor Model field.

4. Click Change Motor.

The motor model will automatically update to the correct model number.



5. Click Yes twice.
6. Verify the motor model matches the electric cylinder model connected to the drive.
7. Click OK.
8. From the Drive Organizer, click General.
9. Using values from the following table, enter Accel Limit, Decel Limit, and User Units.

User Units can be entered in rev/mm or rev/in. Your choice determines the unit of measure for the axis.

Cat. No.	Accel/Decel Limits rpm/s	User Units rev/mm (rev/in.)
MPAR-x1xxxB-Vxx	120000	0.33333 (8.46667)
MPAR-x1xxxE-Vxx	36000	0.10000 (2.54000)
MPAR-x2xxxC-Vxx	72000	0.20000 (5.08000)
MPAR-x2xxxF-Vxx	28346	0.07874 (2.00000)
MPAR-x3xxxE-Mxx	36000	0.10000 (2.54000)
MPAR-x3xxxH-Mxx	18000	0.05000 (1.27000)

10. From the Drive Organizer, click Homing.
11. Enter values from the following table.

These values are recommended; your application may require different values.

Parameter	Metric	English
Home Accel/Decel	10.0000 mm/s ²	0.3937 in/s ²
Home Offset	0.0000 mm	0.0000 in.
Home Velocity Fast	10.0000 mm/s	0.3937 in/s
Home Velocity Slow	10.0000 mm/s	0.3937 in/s
Home Switch	Input B1	

12. Select recommend homing method ID = 33, Home to marker, Reverse.

Description	Value	Units	Min
Home Accel / Decel	10.0000	User Units / Sec ²	0.0000
Home Offset	0.0000	User Units	-104038.508
Home Velocity Fast	10.0000	User Units / Sec	0.0000
Home Velocity Slow	10.0000	User Units / Sec	0.0000
Home Switch	Input B1		

Homing Status: Homed

Start Homing Abort Homing

ID	Home Method	Direction	Logix Type	Home Sensor Polarity
33	Marker	Reverse	Home to marker	n/a
25	Switch - Slow	Forward	Home to sensor	Inactive/Falling
27	Switch - Slow	Reverse	Home to sensor	Inactive/Falling
29	Switch - Fast	Reverse	Home to sensor	Active/Rising
33	Marker	Reverse	Home to marker	n/a
34	Marker	Forward	Home to marker	n/a
35	Immediate	n/a	n/a	n/a

13. Set overtravel limits according to the maximum speed of the servo drive system and the payload of the application.

IMPORTANT Set travel limits and direction of tuning moves in reference to piston rod starting position. Leave adequate travel for the piston rod to complete its moves while tuning.



ATTENTION: Software overtravel must be set prior to initiating the tuning process. Check the starting position of the piston rod and allow for adequate travel.

Insufficient travel while auto tuning will cause the software overtravel to trigger an end-stop impact.



ATTENTION: Care should be taken to not exceed the physical travel limits of the electric cylinder. Doing so will cause the electric cylinder to reach the mechanical end-of-stroke. Impacting the mechanical end-of-stroke can physically damage the screw and internal components of the electric cylinder.


You can determine the deceleration distance before the piston rod contacts the end of travel based on the deceleration rate of the load, and the peak force available from the motor/screw combination. Use [Motion Analyzer](#) to calculate the minimum deceleration distance at the maximum speed of your application.

IMPORTANT A positive-direction move command denotes a rod extend operation, a negative-direction move command denotes a retract operation.

Tune Your Electric Cylinder with MotionView OnBoard Software

1. From the Drive Organizer, select General.
2. From the Drive Mode pull-down menu, choose Autotune.
3. Enable the motor.
4. From the Drive Organizer, select Dynamics.
5. Click Autotune.

The Autotune dialog box opens with the default set to Velocity Tuning.

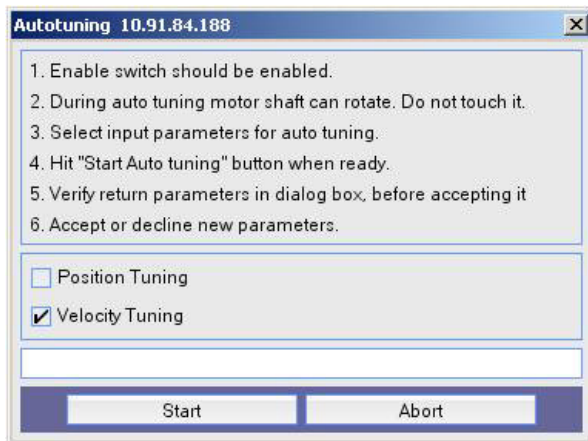

6. Check Velocity Tuning or Position Tuning or both.
7. Follow the instructions in the dialog box.

Maintenance

Follow these steps to maintain your electric cylinder.

1. Remove power to the electric cylinder and lock-out tag-out the power source.
2. Check the axial play of the piston rod for wear of the spindle nut.

Wear on the electric cylinder leads to increased noise.



ATTENTION: If a worn spindle nut breaks on a vertically- or diagonally-mounted electric cylinder, the workload will fall. Uncontrolled moving mass can cause personal injury or damage to equipment.

3. Clean the electric cylinder with a soft cloth, if necessary, by using any non-abrasive cleaning solution.
4. Lightly dampen a soft cloth with isopropyl alcohol and wipe the piston rod and seal.
5. Lubricate the piston rod with a fine layer of LUB-KC1 grease from Klueber at <https://www.klueber.com/en/>.

Storage

Store your electric cylinder for a minimal amount of time in a clean and dry location within [Environmental Specifications](#) on [page 45](#).


Troubleshooting

This table describes some possible anomalies and steps you can take to correct them.

Description	Possible Cause	Corrective Action
Axial play too large.	Wear.	- Replace actuator cylinder. - Send to Rockwell Automation for repair.
Squeaking noises or vibrations.	Distortions.	- Check the electric cylinder is free of stress and evenly supported ≤ 0.2 mm (0.008 in.). - Lubricate piston rod. See Maintenance on page 27. - Modify positioning speed.
	Needs tuning.	Modify control parameters.
	Running noises of the spindle support (with strokes 300 mm (11.81 in.) and high positioning speeds).	Normal, no impairment of function.
Piston rod does not move.	Jamming in mechanical end position, after traveling at excessive speed or into end position.	- Loosen jamming manually. - Switch off power supply. - Remove motor and coupling housing. - Turn drive shaft. - Reduce speed for reference travel. - Provide software end positions, at least 0.25 mm (0.01 in.) from the mechanical end positions (stops).
	Load is too large.	- Reduce load mass. - Reduce positioning speed. - Return for repairs.
	Ambient temperature too low (increased breakaway torque in initial run due to increasing viscosity of the lubricants in the spindle system).	- Reduce load mass. - Reduce positioning speed. - If necessary, allow higher current with servo motors (see operating instructions for the motor). - Increase ambient temperature.
No response from electric cylinder.	Controller/drive not enable.	Enable controller/drive.
	Controller/drive faulted.	Reset the controller/drive.
	Improper/failed wiring.	Check the wiring.
Electric cylinder is enabled but not operating or is operating erratically.	Feedback cable may be damaged.	Test the feedback cable.
	Feedback wiring may be incorrect.	Verify correct feedback wiring.
Electric cylinder is operating but is not up to rated speeds/forces.	Motor phases are wired incorrectly or in incorrect order.	Verify correct motor power wiring.
	Amplifier may be improperly tuned.	Check gain settings.
	Amplifier may be set up improperly for electric cylinder used.	Check amplifier setting for number of poles, voltage, current, resistance, inductance, inertia, and other motor settings.
Actuator cannot move load.	Force is too large for the capacity of the electric cylinder or too much friction is present.	Verify force requirements.
	Misalignment of piston rod to load.	Verify load alignment.
	Amplifier has too low of a current capacity or is limited to too low of a current capacity.	Verify correct amplifier and settings.
Electric cylinder moves or vibrates when piston rod is in motion.	Loose mounting.	Check actuator mounting.
	Amplifier is improperly tuned- wrong gain setting.	Tune amplifier.
Actuator is overheating.	Duty cycle is higher than actuator rating.	Verify load forces and electric cylinder rating.
	Actuator is being operated outside of continuous rating.	Adjust operation to be within continuous operation rating.
	Amplifier is poorly tuned, causing excessive current to be applied to motor.	Check gain settings.

Accessories

The following diagram and tables show the available accessories and their weights. Refer to the Kinetix Motion Control Selection Guide, publication [KNX-SG001](#), for dimensions.

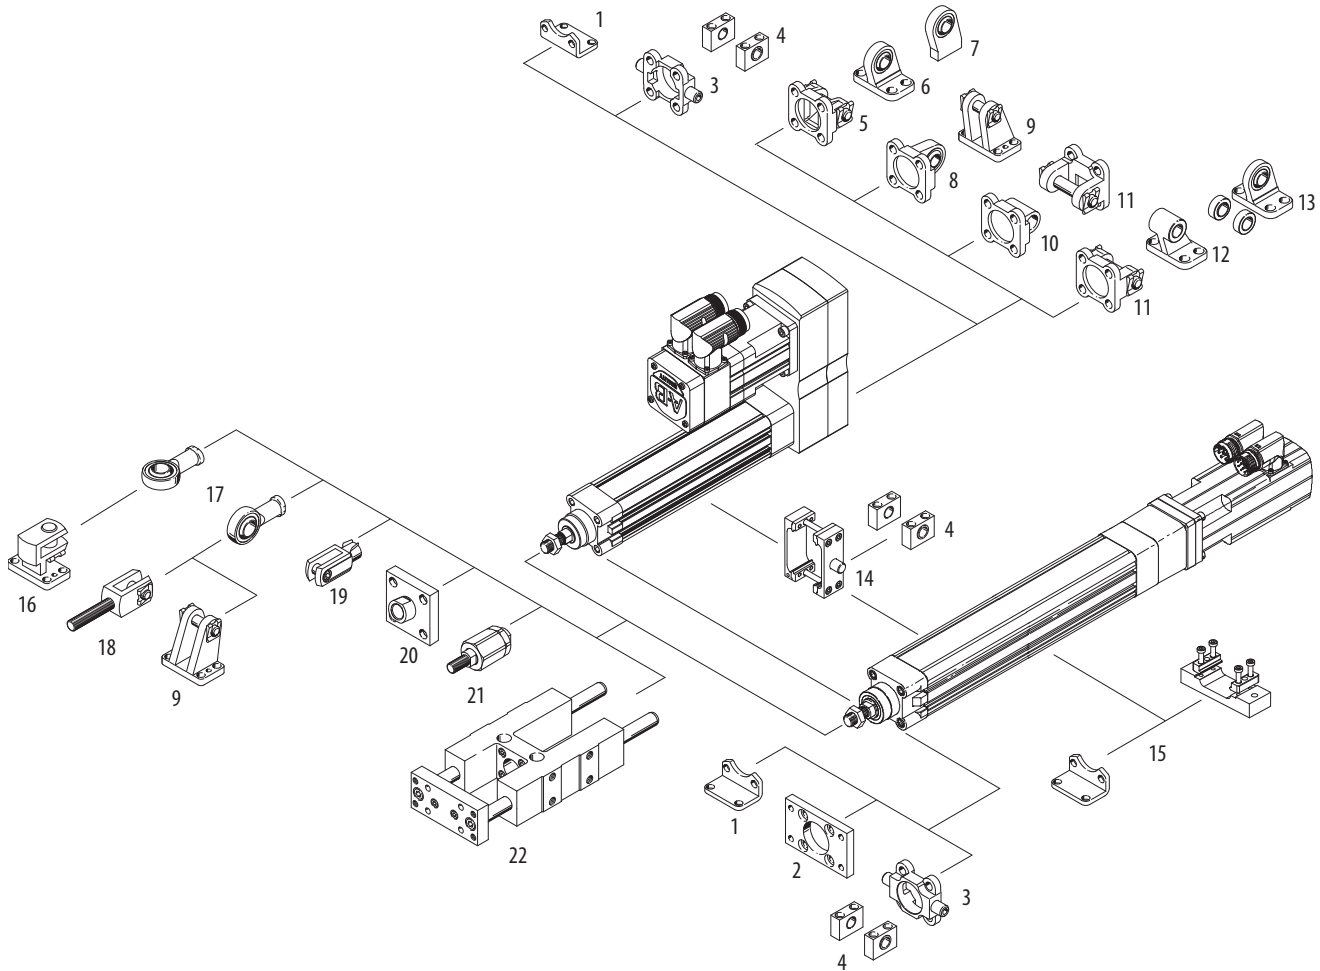

MP-Series Electric Cylinders (Series A and B) Accessories

Accessory Item		Description	Frame	Cat. No.	Weight, approx. g (oz)	Item Dimensions
1	Foot mount	Parallel applications. Includes two foot mounts and mounting bolts.	32	MPAR-NP174369	140 (4.94)	page 33
			40	MPAR-NP174370	280 (9.87)	
			63	MPAR-NP174372	550 (19.40)	
	Foot mount attachment (corrosion resistant)		32	MPAR-NP176937	140 (4.94)	
			40	MPAR-NP176938	280 (9.87)	
			63	MPAR-NP176940	550 (19.40)	
2	Flange mounting	In-line or parallel applications. Includes mounting bolts.	32	MPAR-NA174376	240 (8.46)	page 34
			40	MPAR-NA174377	280 (9.88)	
			63	MPAR-NA174379	690 (24.34)	
	Flange mounting (corrosion resistant)		32	MPAR-NA161846	240 (8.46)	
			40	MPAR-NA161847	300 (10.58)	
			63	MPAR-NA161849	710 (25.04)	

MP-Series Electric Cylinders (Series A and B) Accessories (Continued)

Accessory Item		Description	Frame	Cat. No.	Weight, approx. g (oz)	Item Dimensions
3	Trunnion flange	In-line or parallel applications. Includes mounting bolts.	32	MPAR-NA174411	130 (4.58)	page 34
			40	MPAR-NA174412	240 (8.46)	
			63	MPAR-NA174414	600 (21.16)	
	Trunnion flange (corrosion resistant)		32	MPAR-NA161852	150 (5.29)	
			40	MPAR-NA161853	260 (9.17)	
			63	MPAR-NA161855	640 (22.57)	
4	Trunnion support	In-line or parallel applications. Use with items 3 and 14. Two supports are included as shown.	32	MPAR-NA32959	130 (4.58)	page 35
			40	MPAR-NA32960	400 (14.11)	
			63	MPAR-NA32961	480 (16.93)	
	Trunnion support (corrosion resistant)		32	MPAR-NA161874	200 (7.05)	
			40	MPAR-NA161875	330 (11.64)	
			63	MPAR-NA161876	440 (11.64)	
5	Swivel flange (pin, narrow)	See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication MPAR-IN001 .				
6	Clevis foot (spherical bearing)	Parallel applications. Use with item 5. Includes 1 flange with spherical bearing.	32	MPAR-NP31740	185 (6.53)	page 36
			40	MPAR-NP31741	295 (10.40)	
			63	MPAR-NP31743	655 (23.10)	
7	Clevis foot (weld-on)	Parallel applications. Use with item 5. Includes 1 bracket with spherical bearing.	32	MPAR-NP31747	105 (3.70)	page 35
			40	MPAR-NP31748	160 (5.64)	
			63	MPAR-NP31747	365 (12.87)	
8	Swivel flange (spherical bearing)	See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication MPAR-IN001 .				
9	Clevis foot (pin)	Parallel applications. Use with items 8 or 17. Includes mount, pivot pin, and retaining clip.	32	MPAR-NA31761	220 (7.76)	page 37
			40	MPAR-NA31762	300 (10.58)	
			63	MPAR-NA31764	580 (20.46)	
10	Swivel flange	Parallel applications. Use with item 11. Includes flange and mounting bolts.	32	MPAR-NP174404	75 (2.64)	page 37
			40	MPAR-NP174405	100 (3.53)	
			63	MPAR-NP174407	250 (8.82)	
11	Swivel flange (pin, wide)	Parallel applications. Use with items 10, 12, or 13. Includes swivel flange, pivot pin, mounting screws, and retaining clips.	32	MPAR-NP174390	100 (3.53)	page 38
			40	MPAR-NP174391	150 (5.29)	
			63	MPAR-NP174393	370 (13.05)	
	Swivel flange (corrosion resistant)		32	MPAR-NP176944	100 (3.53)	
			40	MPAR-NP176945	150 (5.29)	
			63	MPAR-NP176947	370 (13.05)	
12	Clevis foot	Parallel applications. Use with item 11.	32	MPAR-NP33890	170 (6.00)	page 38
			40	MPAR-NP33891	240 (8.46)	
			63	MPAR-NP33893	520 (18.34)	
	Clevis foot (corrosion resistant)		32	MPAR-NP161840	120 (4.23)	
			40	MPAR-NP161841	210 (7.41)	
			63	MPAR-NP161843	450 (15.87)	

MP-Series Electric Cylinders (Series A and B) Accessories (Continued)

Accessory Item		Description	Frame	Cat. No.	Weight, approx. g (oz)	Item Dimensions
13	Clevis foot (spherical bearing)	Parallel applications. Use with item 11. Includes flange with spherical bearing and cylindrical spacers.	32	MPAR-NP5561	160 (5.64)	page 39
			40	MPAR-NP5562	270 (9.52)	
			63	MPAR-NP5564	605 (21.34)	
14	Trunnion mounting	See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication MPAR-IN001 .				
15	Foot mounting kit	See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication MPAR-IN001 .				
16	Clevis foot (right angle)	In-line or parallel applications. Use with item 17. Includes clevis foot, pivot pin, and retaining clip.	32	MPAR-NA31768	290 (10.23)	page 40
			40	MPAR-NA31769	360 (12.70)	
			63	MPAR-NA31771	880 (31.0)	

MP-Series Electric Cylinders Rod-end Accessories

Accessory Item		Description	Frame	Cat. No.	Weight, approx. g (oz)	Item Dimensions
17	Rod eye	In-line or parallel applications. Use with items 16, 18, or 9. Includes rod eye and hex nut	32	MPAR-NE9261	70 (2.47)	page 41
			40	MPAR-NE9262	110 (3.53)	
			63	MPAR-NE9263	210 (7.41)	
	Rod eye (corrosion resistant)		32	MPAR-NE195582	70 (2.47)	
			40	MPAR-NE195583	110 (3.53)	
			63	MPAR-NE195584	210 (7.41)	
18	Rod clevis (threaded rod)	In-line or parallel applications. Use with item 17. For spherical connection of cylinders with rod eye. Includes rod clevis, pivot pin, and retaining clip.	32	MPAR-NE32954	140 (4.94)	page 42
			40	MPAR-NE10767	210 (7.41)	
			63	MPAR-NE10768	500 (17.64)	
19	Rod clevis	In-line or parallel applications. Use with item 17. Permits a swiveling movement of the cylinder in one plane. Includes rod clevis, pivot pin, and retaining clip.	32	MPAR-NE6144	110 (3.88)	page 42
			40	MPAR-NE6145	170 (6.00)	
			63	MPAR-NE6146	390 (13.76)	
	Rod clevis (corrosion resistant)		32	MPAR-NE13569	110 (3.88)	
			40	MPAR-NE13570	180 (6.35)	
			63	MPAR-NE13571	400 (14.11)	
20	Coupling piece	In-line or parallel applications. Links the piston rod-end of the cylinder to the machine parts to be moved. Used to compensate for radial misalignment. Includes flange plate and threaded coupling.	32	MPAR-NE36125	110 (3.88)	page 43
			40	MPAR-NE36126	180 (6.35)	
			63	MPAR-NE36127	250 (8.82)	
21	Self-aligning rod coupler	See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication MPAR-IN001 .				

MP-Series Electric Cylinders Rod Guide (Item 22) Accessories

Rod Guide Cat. No. ⁽¹⁾	Frame	Stroke Length mm (in.)	Weight, approx kg (lb)
MPAR-NE34494	32	100 (3.9)	1.7 (3.75)
MPAR-NE34496		200 (7.9)	1.9 (4.19)
MPAR-NE34497		320 (12.6)	2.1 (4.63)
MPAR-NE150290		400 (15.7)	2.3 (5.07)
MPAR-NE34500	40	100 (3.9)	2.7 (5.95)
MPAR-NE34502		200 (7.9)	3.0 (6.61)
MPAR-NE34504		320 (12.6)	3.4 (7.50)
MPAR-NE150291		400 (15.7)	3.7 (8.16)
MPAR-NE34505		500 (19.7)	4.0 (8.82)
MPAR-NE34514	63	100 (3.9)	5.9 (13.01)
MPAR-NE34516		200 (7.9)	6.4 (14.11)
MPAR-NE34518		320 (12.6)	7.0 (15.43)
MPAR-NE34519		400 (15.7)	7.4 (16.31)
MPAR-NE34520		500 (19.7)	7.9 (17.42)

(1) See MP-Series Electric Cylinders (Series B and C) Installation Instructions, publication [MPAR-IN001](#).

Trunnion Mounting Kit

Cat. No.	Frame Size	Torque N·m (lb·ft)
MPAR-NA163525	32	4...5 (2.9...3.7)
MPAR-NA163526	40	8...9 (5.9...6.6)
MPAR-NA163528	63	18...20 (13.3...14.5)

Coupling Piece Attachment

Cat. No.	Frame Size	Max Torque ⁽¹⁾ N·m (lb·ft)	Max Torque ⁽²⁾ N·m (lb·ft)	Max Torque ⁽³⁾ N·m (lb·ft)
MPAR-NE36125	32	5.9 (4.35)	34 (25.1)	12 (8.8)
MPAR-NE36126	40	5.9 (4.35)	61 (45.0)	22 (16.2)
MPAR-NE36127	63	9.9 (7.3)	148 (109.2)	57 (42.0)

(1) Torque applies to mounting screws with standard threads and strength class 8.8. Apply torque evenly to mounting screws.


(2) Torque applies to lock nut on piston rod.

(3) Torque that the coupling can transmit with coefficient of friction $\mu = 0.1$ and 10 x safety margin at maximum permissible tightening torque.

Discontinued Mounting Accessories

Components are designed to metric dimensions. Inch dimensions are approximate conversions from millimeters. Dimensions without tolerances are for reference.

Foot Mount Attachment

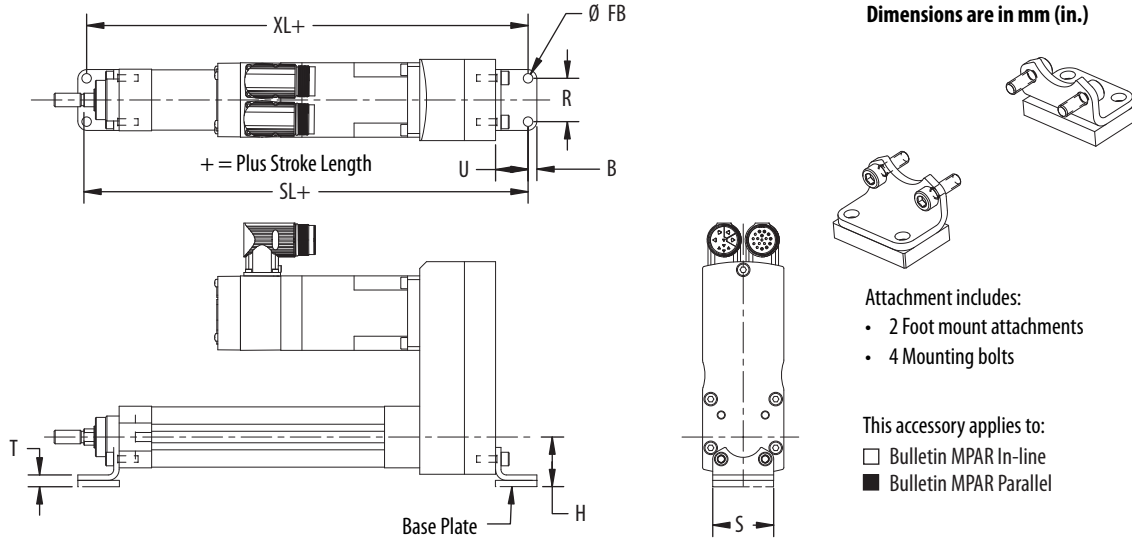

Cat. No. ⁽¹⁾	Cat. No. ⁽²⁾ Corrosion Resistant	Frame	T mm (in.)	FB mm (in.)	H mm (in.)	B mm (in.)	U mm (in.)	R mm (in.)	S mm (in.)	SL+ mm (in.)
MPAR-NP174369	MPAR-NP176937	32	4.0 (0.16)	7.0 (0.27)	32.0 (1.26)	6.5 (0.25)	24.0 (0.94)	32.0 (1.26)	45.0 (1.77)	228.0 (8.97)
MPAR-NP174370	MPAR-NP176938	40	14.0 ⁽³⁾ (0.55)	10.0 (0.39)	46.0 ⁽³⁾ (1.81)	9.0 (0.34)	28.0 (1.10)	36.0 (1.42)	54.0 (2.12)	260.5 ⁽⁴⁾ (10.25)
MPAR-NP174372	MPAR-NP176940	63	13.0 ⁽³⁾ (0.51)	10.0 (0.39)	58.0 ⁽³⁾ (2.28)	12.5 (0.49)	32.0 (1.26)	50.0 (1.97)	75.0 (2.95)	328.3 (12.92)


(1) Material is galvanized steel. Contains no copper, PTFE, or silicone.

(2) Material is high-alloy steel for high-corrosion protection. Contains no copper, PTFE, or silicone.


(3) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.

(4) Add 13 mm (0.51 in.) for catalog number MPAR-x2xxF-Vxx.

Flange Mounting Attachment

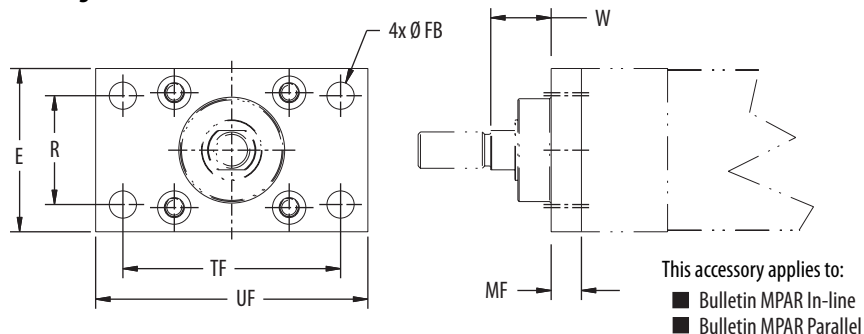

Dimensions are in mm (in.)

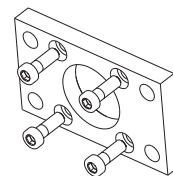

Attachment includes:

- 1 Flange mounting
- 4 Mounting bolts

This accessory applies to:


- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Cat. No. ⁽²⁾ Corrosion Resistant	Frame	E mm (in.)	FB mm (in.) H13	MF mm (in.)	R mm (in.)	TF mm (in.)	UF mm (in.)
MPAR-NA174376	MPAR-NA161846	32	45.0 (1.77)	7.0 (0.28)	10.0 (0.39)	32.0 (1.26)	64.0 (2.52)	80.0 (3.15)
MPAR-NA174377	MPAR-NA161847	40	54.0 (2.13)	9.0 (0.35)	10.0 (0.39)	36.0 (1.42)	72.0 (2.83)	90.0 (3.54)
MPAR-NA174379	MPAR-NA161849	63	75.0 (2.95)	9.0 (0.35)	12.0 (0.47)	50.0 (1.97)	100 (3.94)	120 (4.72)


(1) Material is galvanized steel and subject to moderate corrosion stress. Contains no copper, PTFE, or silicone.

(2) Material is high-alloy steel for environments requiring higher corrosion resistance. Contains no copper, PTFE, or silicone.

Trunnion Flange Attachment

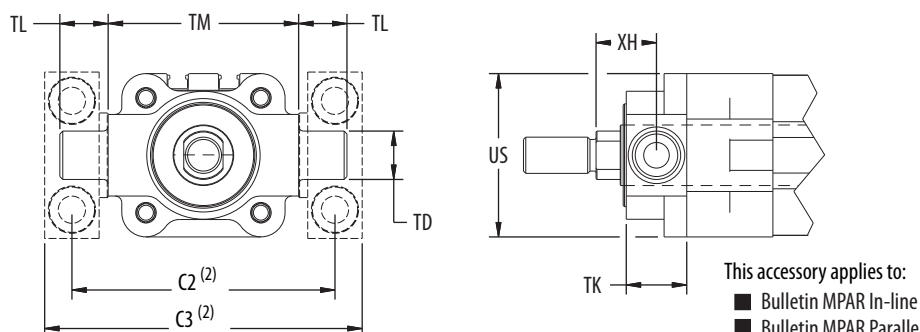

Dimensions are in mm (in.)

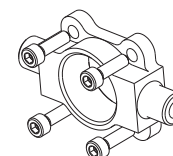

Attachment includes:

- 1 Trunnion mounting
- 4 Mounting bolts

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel



Cat. No. ⁽¹⁾	Cat. No. ⁽²⁾ Corrosion Resistant	Frame	C2 mm (in.)	C3 mm (in.)	TD mm (in.) e9	TK mm (in.)	TL mm (in.)	TM mm (in.)	US mm (in.)
MPAR-NA174411	MPAR-NA161852	32	71.0 (2.80)	86.0 (3.39)	12.0 (0.47)	16.0 (0.63)	12.0 (0.47)	50.0 (1.97)	45.0 (1.77)
MPAR-NA174412	MPAR-NA161853	40	87.0 (3.43)	105 (4.13)	16.0 (0.63)	20.0 (0.79)	16.0 (0.63)	63.0 (2.48)	54.0 (2.13)
MPAR-NA174414	MPAR-NA161855	63	116 (4.57)	136 (5.35)	20.0 (0.79)	24.0 (0.94)	20.0 (0.79)	90.0 (3.54)	75.0 (2.95)

(1) Material is special steel casting and subject to moderate corrosion stress. Contains no copper, PTFE, or silicone.

(2) Material is electrolytically-polished special steel casting for environments requiring higher corrosion resistance. Contains no copper, PTFE, or silicone.

(3) These dimensions are drawn to the trunnion support blocks as shown on [page 35](#) (not included with the trunnion flange attachment).

Trunnion Support Block (corrosion resistant) Attachments

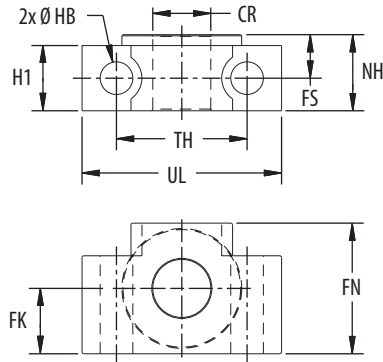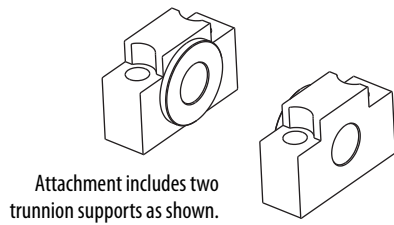

Dimensions are in mm (in.)

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel



Cat. No. ⁽¹⁾	Frame	CR mm (in.) D11	FK ⁽²⁾ mm (in.)	FN mm (in.)	FS mm (in.)	H1 mm (in.)	HB mm (in.) H13	NH mm (in.)	TH ⁽³⁾ mm (in.)	UL mm (in.)
MPAR-NA161874	32	12.0 (0.47)	15.0 (0.59)	30.0 (1.18)	10.5 (0.41)	15.0 (0.59)	6.6 (0.26)	18.0 (0.71)	32.0 (1.26)	46.0 (1.81)
MPAR-NA161875	40	16.0 (0.63)	18.0 (0.71)	36.0 (1.42)	12.0 (0.47)	18.0 (0.71)	9.0 (0.35)	21.0 (0.83)	36.0 (1.42)	55.0 (2.17)
MPAR-NA161876	63	20.0 (0.79)	20.0 (0.79)	40.0 (1.57)	13.0 (0.51)	20.0 (0.79)	11.0 (0.43)	23.0 (0.91)	42.0 (1.65)	65.0 (2.56)

(1) Material is high-alloy steel for environments requiring higher corrosion resistance. Contains no copper, PTFE, or silicone.


(2) Tolerance for this dimension is ± 0.1 mm (± 0.0039 in.).

(3) Tolerance for this dimension is ± 0.2 mm (± 0.0079 in.).

Clevis Foot (weld-on) Attachment

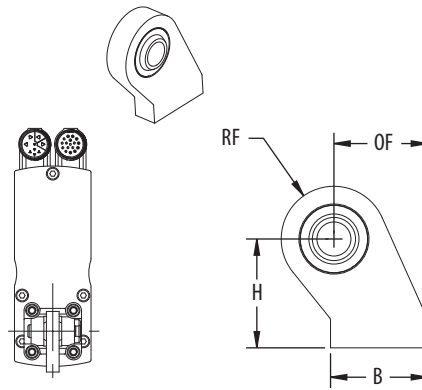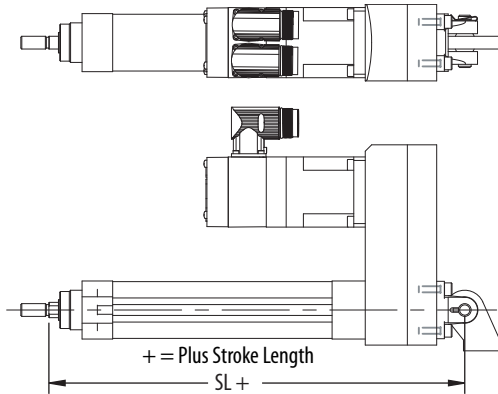

Dimensions are in mm (in.)

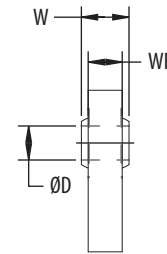

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Frame	D mm (in.)	B mm (in.)	H mm (in.) js14	OF ⁽²⁾ mm (in.)	RF ⁽²⁾ mm (in.)	W ⁽³⁾ mm (in.)	WR ⁽⁴⁾ mm (in.)	SL+ mm (in.)
MPAR-NP31747	32	10.0 (0.39) ⁽⁵⁾	28.5 (1.12)	32.0 (1.26)	27.5 (1.08)	15.5 (0.61)	14.0 (0.55)	10.5 (0.41)	226.0 (8.90)
MPAR-NP31748	40	12.0 (0.47) ⁽⁶⁾	33.5 (1.32)	36.0 (1.42)	30.5 (1.20)	17.5 (0.69)	16.0 (0.63)	12.0 (0.47)	257.5 (10.14) ⁽⁷⁾
MPAR-NP31750	63	16.0 (0.63) ⁽⁶⁾	48.0 (1.89)	50.0 (1.97)	44.5 (1.75)	22.5 (0.88)	21.0 (0.82)	15.0 (0.59)	328.3 (12.92)

(1) Material is die cast aluminum. Contains no copper, PTFE, or silicone.

(2) Tolerance for this dimension is ± 0.5 mm (± 0.0197 in.).


(3) Tolerance for this dimension is -0.1 mm (± 0.0039 in.).

(4) Tolerance for this dimension is -0.2 mm (± 0.0079 in.).

(5) Tolerance for this dimension is $+0.013$ mm (± 0.00051 in.).

(6) Tolerance for this dimension is $+0.015$ mm (± 0.00059 in.).

(7) Add 13 mm (0.51 in.) for catalog number MPAR-x2xxxF-Vxx.

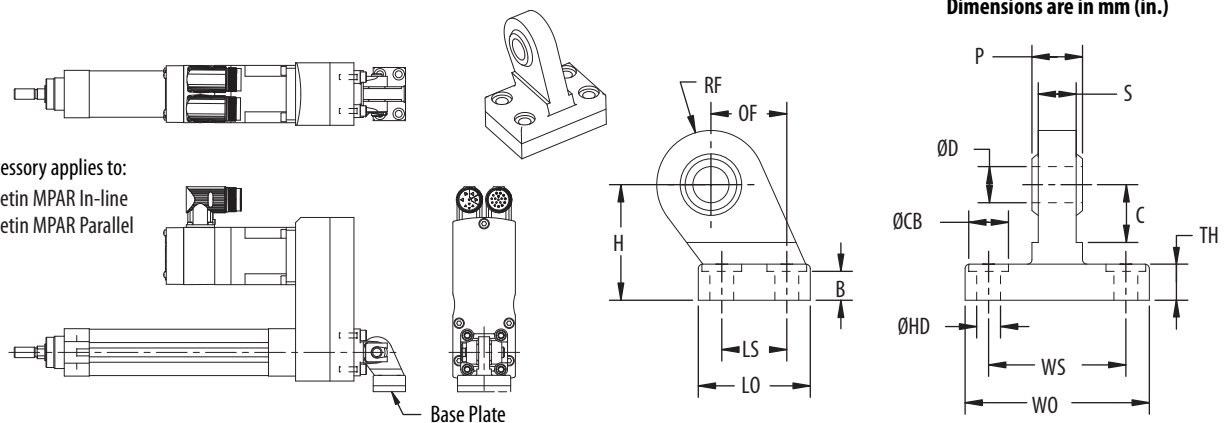Clevis Foot (spherical bearing) Attachment

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Frame	D mm (in.)	B ⁽²⁾ mm (in.)	C mm (in.)	CB mm (in.)	H mm (in.) js14	HD mm (in.) H13	LO mm (in.)	LS mm (in.) js14
MPAR-NP31740	32	10.0 ⁽³⁾ (0.39)	8.50 (0.33)	N/A	11.0 (0.43)	32.0 (1.26)	6.6 (0.26)	31.0 (1.22)	18.0 (0.71)
MPAR-NP31741	40	12.0 ⁽⁴⁾ (0.47)	18.5 ⁽⁵⁾ (0.73)	N/A	11.0 (0.43)	46.0 ⁽⁵⁾ (1.81)	6.6 (0.26)	35.0 (1.38)	22.0 (0.86)
MPAR-NP31743	63	16.0 ⁽⁴⁾ (0.63)	18.5 ⁽⁵⁾ (0.73)	27.0 (1.06)	15.0 (0.59)	58.0 ⁽⁵⁾ (2.28)	9.0 (0.35)	50.0 (1.97)	35.0 (1.38)

(1) Frame 32 and 40 material is high-alloy steel. Frame 63 material is nodular graphite cast iron. Contains no copper, PTFE, or silicone.

(2) Tolerance for this dimension is ± 0.8 mm (± 0.0315 in.).

(3) Tolerance for this dimension is ± 0.013 mm (± 0.00051 in.).

(4) Tolerance for this dimension is ± 0.015 mm (± 0.00059 in.).

(5) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.

Cat. No.	Frame	OF mm (in.) js14	P ⁽¹⁾ mm (in.) js14	RF mm (in.)	S ⁽²⁾ mm (in.)	TH mm (in.)	WO mm (in.)	WS mm (in.) js14
MPAR-NP31740	32	21.0 (0.82)	14.0 (0.55)	15.0 (0.59)	10.5 (0.41)	10.0 ⁽³⁾ (0.39)	51.0 (2.01)	38.0 (1.49)
MPAR-NP31741	40	24.0 (0.94)	16.0 (0.63)	17.0 (0.67)	12.0 (0.47)	20.0 ⁽³⁾ ⁽⁴⁾ (0.79)	54.0 (2.12)	41.0 (1.61)
MPAR-NP31743	63	37.0 (1.45)	21.0 (0.82)	22.0 (0.86)	15.0 (0.59)	20.0 ⁽⁵⁾ ⁽⁴⁾ (0.79)	67.0 (2.64)	52.0 (2.05)

(1) Tolerance for this dimension is ± 0.1 mm (± 0.0039 in.).


(2) Tolerance for this dimension is ± 0.2 mm (± 0.0079 in.).

(3) Tolerance for this dimension is ± 0.2 mm (± 0.0079 in.).

(4) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.

(5) Tolerance for this dimension is ± 0.6 mm (± 0.0236 in.).

Clevis Foot (pin) Attachment

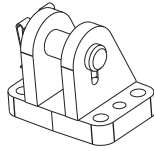


This accessory applies to:


- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Attachment includes:

- 1 Clevis foot
- 1 Pivot pin ⁽²⁾
- 1 Retaining clip

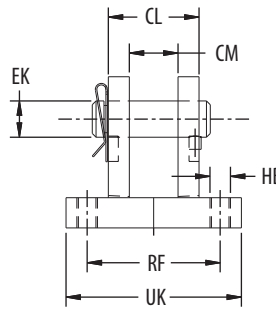

Dimensions are in mm (in.)

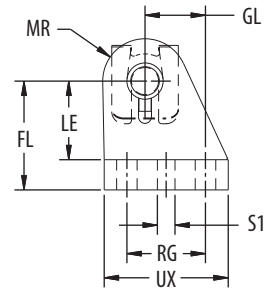

Cat. No. ⁽¹⁾	Frame	CL mm (in.)	CM mm (in.)	EK mm (in.)	FL mm (in.)	GL mm (in.)	HB mm (in.)	LE mm (in.)	MR mm (in.)	RF mm (in.)	RG mm (in.)	S1 mm (in.)	UK mm (in.)	UX mm (in.)
MPAR-NA31761	32	28.0 (1.10)	14.1 (0.56)	10.0 (0.39)	32.0 (1.26)	16.0 (0.63)	6.8 (0.27)	24.0 (0.94)	12.0 (0.47)	42.0 (1.65)	20.0 (0.79)	4.8 (0.19)	56.0 (2.20)	36.0 (1.42)
MPAR-NA31762	40	30.0 (1.18)	16.1 (0.63)	12.0 (0.47)	36.0 (1.42)	20.0 (0.79)	6.8 (0.27)	26.0 (1.02)	14.0 (0.55)	44.0 (1.73)	26.0 (1.02)	5.8 (0.23)	58.0 (2.28)	41.5 (1.63)
MPAR-NA31764	63	40.0 (1.57)	21.1 (0.83)	16.0 (0.63)	50.0 (1.97)	25.0 (0.98)	9.0 (0.35)	38.0 (1.50)	17.0 (0.67)	56.0 (2.20)	31.0 (1.22)	7.8 (0.31)	70.0 (2.76)	47.0 (1.85)


(1) Material is nodular graphite cast iron for environments requiring moderate corrosion resistance. Contains no copper, PTFE, or silicone.

(2) The pivot pin is secured against rotation with a dowel pin.


Swivel Flange Attachment

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

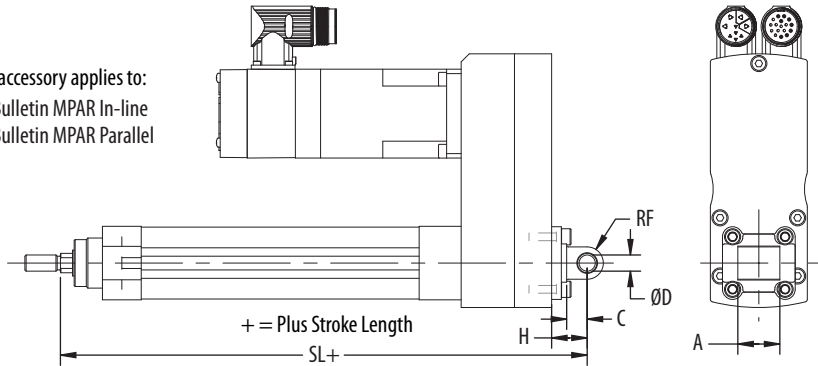

Dimensions are in mm (in.)

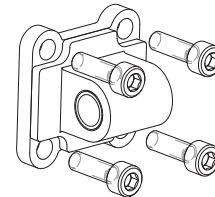

Attachment includes:

- 1 Swivel flange
- 4 Mounting screws

Cat. No. ⁽¹⁾	Frame	D mm (in.) H9	A ⁽²⁾ mm (in.) h12	C mm (in.)	H ⁽²⁾ mm (in.)	RF mm (in.)	SL+ mm (in.)
MPAR-NP174404	32	10.0 (0.39)	26.0 (1.02)	13.0 (0.51)	22.0 (0.86)	10.0 (0.39)	226.0 (8.90)
MPAR-NP174405	40	12.0 (0.47)	28.0 (1.10)	16.0 (0.63)	25.0 (0.98)	12.0 (0.47)	257.5 ⁽³⁾ (10.14)
MPAR-NP174407	63	16.0 (0.63)	40.0 (1.57)	21.0 (0.82)	32.0 (0.26)	16.0 (0.63)	328.3 (12.92)

(1) Material is die cast aluminum. Contains no copper, PTFE, or silicone.


(2) Tolerance for this dimension is ± 0.2 mm (± 0.0079 in.).

(3) Add 13 mm (0.51 in.) for catalog number MPAR-x2xxF-Vxx.


Swivel Flange (pin, wide) Attachment

This accessory applies to:

- ☐ Bulletin MPAR In-line
- ☒ Bulletin MPAR Parallel

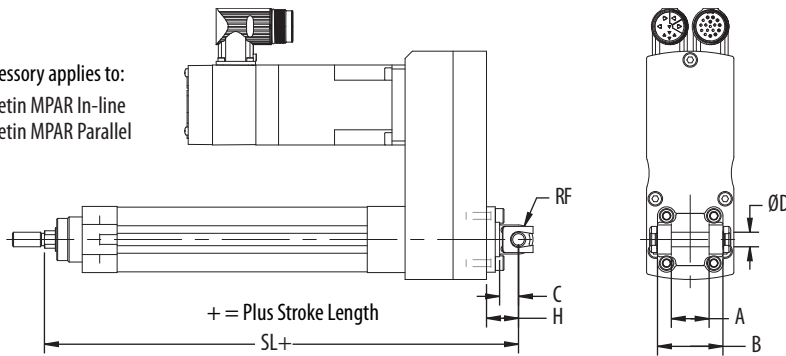

Dimensions are in mm (in.)

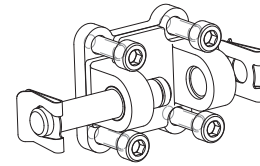

Attachment includes:

- 1 Swivel flange
- 1 Pivot pin
- 2 Retaining clips
- 4 Mounting screws

Cat. No. ⁽¹⁾	Cat. No. ⁽²⁾ Corrosion Resistant	Frame	D mm (in.) e8	A mm (in.) H14	B mm (in.) h14	C mm (in.)	H ⁽³⁾ mm (in.)	RF mm (in.)	SL+ mm (in.)
MPAR-NP174390	MPAR-NP176944	32	10.0 (0.39)	26.0 (1.02)	45.0 (1.77)	13.0 (0.51)	22.0 (0.86)	10.0 (0.39)	226.0 (8.90)
MPAR-NP174391	MPAR-NP176945	40	12.0 (0.47)	28.0 (1.10)	52.0 (2.05)	16.0 (0.63)	25.0 (0.98)	12.0 (0.47)	257.5 ⁽⁴⁾ (10.14)
MPAR-NP174393	MPAR-NP176947	63	16.0 (0.63)	40.0 (1.57)	70.0 (2.75)	21.0 (0.82)	32.0 (0.26)	16.0 (0.63)	328.3 (12.92)


(1) Material is die cast aluminum. Contains no copper, PTFE, or silicone.

(2) Material is die cast aluminum, high-corrosion protection. Contains no copper, PTFE, or silicone.


(3) Tolerance for this dimension is ± 0.2 mm (± 0.0079 in.).

(4) Add 13 mm (0.51 in.) for catalog number MPAR-x2xxxF-Vxx.

Clevis Foot Attachment

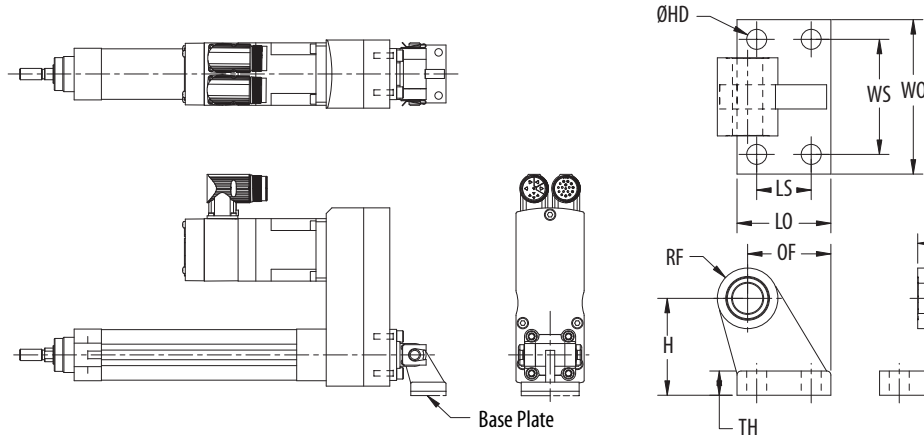

Dimensions are in mm (in.)

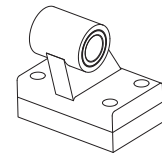

Attachment includes
1 clevis foot.

This accessory applies to:

- ☐ Bulletin MPAR In-line
- ☒ Bulletin MPAR Parallel


Cat. No. ⁽¹⁾ Corrosion Resistant	Frame	D mm (in.) D11	H mm (in.)	HD mm (in.) H13	LO mm (in.)	LS mm (in.)	OF mm (in.)	P ⁽²⁾ mm (in.)	RF mm (in.)	TH mm (in.)	WO mm (in.)	WS mm (in.)
MPAR-NP161840	32	10.0 (0.39)	32.0 (1.26)	6.6 (0.26)	31.0 (1.22)	18.0 (0.71)	21.0 (0.82)	25.8 (1.01)	10.0 (0.39)	8.0 (0.31)	51.0 (2.01)	38.0 (1.49)
MPAR-NP161841	40	12.0 (0.47)	46.0 ⁽³⁾ (1.81)	6.6 (0.26)	35.0 (1.38)	22.0 (0.86)	24.0 (0.94)	27.8 (1.09)	11.0 (0.43)	20.0 ⁽³⁾ (0.79)	54.0 (2.12)	41.0 (1.61)
MPAR-NP161843	63	16.0 (0.63)	58.0 ⁽³⁾ (2.28)	9.0 (0.35)	50.0 (1.97)	35.0 (1.38)	37.0 (1.45)	39.8 (1.56)	15.0 (1.56)	20.0 ⁽³⁾ (0.79)	67.0 (2.64)	52.0 (2.05)

(1) Material is special steel casting, high corrosion protection stainless steel. Contains no copper, PTFE, or silicone.

(2) Tolerance for this dimension is -0.4 mm (-0.0157 in.).

(3) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.


Clevis Foot (spherical bearing) Attachment



Dimensions are in mm (in.)




This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

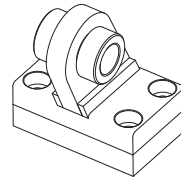

Attachment includes:

- 1 Clevis foot with spherical bearing
- 2 cylindrical spacers

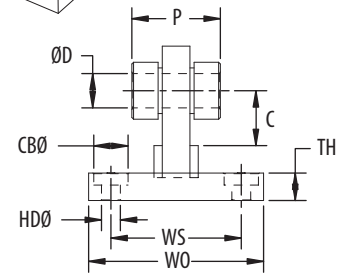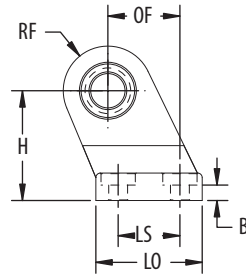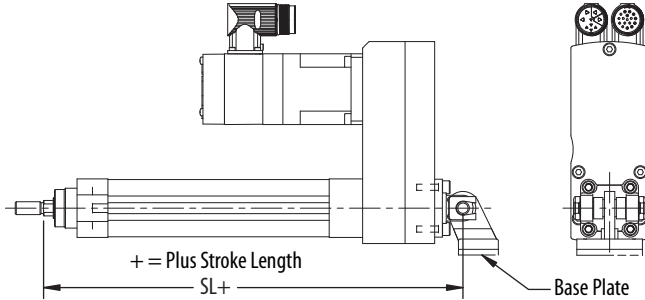

Cat. No. ⁽¹⁾	Frame	D ⁽²⁾ mm (in.)	B mm (in.)	C mm (in.)	CB mm (in.)	H ⁽³⁾ mm (in.)	HD mm (in.)	LO mm (in.)	LS mm (in.)
MPAR-NP5561	32	10.0 (0.39)	4.50 (0.18)	16.0 (0.63)	10.0 (0.39)	32.0 (1.26)	5.5 (0.21)	31.0 (1.22)	18.0 (0.71)
MPAR-NP5562	40	12.0 (0.47)	14.30 ⁽⁴⁾ (0.56)	20.0 (0.79)	10.0 (0.39)	46.0 ⁽⁴⁾ (1.81)	5.5 (0.21)	35.0 (1.38)	22.0 (0.86)
MPAR-NP5564	63	16.0 (0.63)	13.2 ⁽⁴⁾ (0.52)	30.0 (1.18)	11.0 (0.43)	58.0 ⁽⁴⁾ (2.28)	6.6 (0.26)	50.0 (1.97)	35.0 (1.38)

(1) Frame 32 and 40 material is high-alloy steel. Frame 63 material is nodular graphite cast iron. Contains no copper, PTFE, or silicone.

(2) Tolerance for this dimension is -0.008 mm (-0.00031 in.).

(3) Tolerance for this dimension is ±0.5 mm (±0.0197 in.).


(4) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.

Cat. No.	Frame	OF mm (in.)	P mm (in.)	RF ⁽¹⁾ mm (in.)	SL+ mm (in.)	TH mm (in.)	WO mm (in.)	WS mm (in.)
MPAR-NP5561	32	21.0 (0.82)	25.8 (1.01)	13.0 (0.51)	226.0 (8.90)	10.0 (0.39)	51.0 (2.01)	38.0 (1.49)
MPAR-NP5562	40	24.0 (0.94)	27.8 (1.09)	15.0 (0.59)	257.5 ⁽²⁾ (10.14)	20.0 ⁽³⁾ (0.79)	54.0 (2.12)	41.0 (1.61)
MPAR-NP5564	63	37.0 (1.45)	39.8 (1.56)	20.0 (0.79)	328.3 (12.92)	20.0 ⁽³⁾ (0.79)	67.0 (2.64)	52.0 (2.05)

(1) Tolerance for this dimension is -0.1 mm (±0.0039 in.).


(2) Add 13 mm (0.51 in.) for catalog number MPAR-x2xxx-F-Vxx.

(3) This dimension includes base plate provided with frame 40 and frame 63 foot mount attachments.

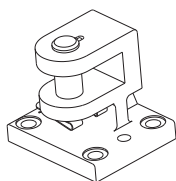Clevis Foot (right-angle) Attachment

Attachment includes:

- 1 Clevis foot
- 1 Pivot pin ⁽⁵⁾
- 1 Retaining clip

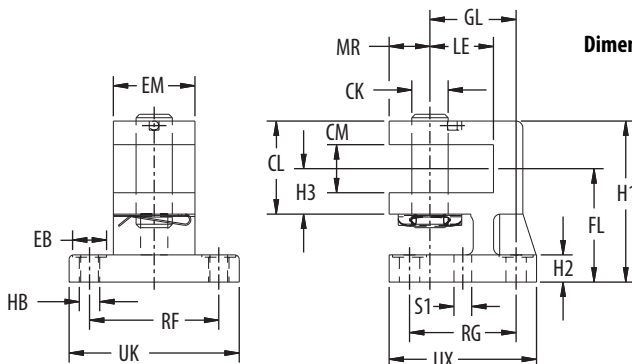

Dimensions are in mm (in.)

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Frame	CK mm (in.) h9	CL mm (in.)	CM ⁽²⁾ mm (in.)	EB mm (in.)	EM mm (in.)	FL ⁽³⁾ mm (in.)	GL ⁽³⁾ mm (in.)	H1 ⁽⁴⁾ mm (in.)	H2 mm (in.)	H3 mm (in.)	HB mm (in.)	LE mm (in.)
MPAR-NA31768	32	10.0 (0.39)	27.0 (1.06)	14.2 (0.56)	11.0 (0.43)	25.0 (0.98)	32.0 (1.26)	22.0 (0.87)	45.0 (1.77)	9.0 (0.35)	14.0 (0.55)	6.6 (0.26)	18.0 (0.71)
MPAR-NA31769	40	12.0 (0.47)	31.0 (1.22)	16.2 (0.64)	11.0 (0.43)	25.0 (0.98)	36.0 (1.42)	22.0 (0.87)	52.0 (2.05)	9.0 (0.35)	15.0 (0.59)	6.6 (0.26)	22.0 (0.87)
MPAR-NA31771	63	16.0 (0.63)	41.0 (1.61)	21.2 (0.83)	15.0 (0.59)	36.0 (1.42)	50.0 (1.97)	38.0 (1.50)	71.0 (2.80)	12.0 (0.47)	20.0 (0.79)	9.0 (0.35)	28.0 (1.10)

⁽¹⁾ Material is nodular graphite cast iron for environments requiring moderate corrosion resistance.⁽²⁾ Tolerance for this dimension is +0.2 mm (+0.008 in.).⁽³⁾ Tolerance for this dimension is ±0.3 mm (±0.012 in.) for Frame 32. Tolerance is js14 for Frame 40 and Frame 63.⁽⁴⁾ Tolerance for this dimension is ±0.5 mm (±0.019 in.) for Frame 32 and Frame 40.⁽⁵⁾ The pivot pin is secured against rotation with a dowel pin.

Cat. No.	Frame	MR mm (in.)	RF ⁽¹⁾ mm (in.)	RG ⁽¹⁾ mm (in.)	S1 mm (in.)	UK mm (in.)	UX mm (in.)
MPAR-NA31768	32	12.5 (0.49)	40.0 (1.57)	29.0 (1.14)	4.8 (0.19)	56.0 (2.20)	45.0 (1.77)
MPAR-NA31769	40	15.0 (0.59)	40.0 (1.57)	29.0 (1.14)	5.8 (0.23)	56.0 (2.20)	45.0 (1.77)
MPAR-NA31771	63	18.0 (0.71)	57.0 (2.24)	47.0 (1.85)	7.8 (0.31)	75.0 (2.95)	65.0 (2.56)

⁽¹⁾ Tolerance for this dimension is ±0.3 mm (±0.012 in.) for Frame 32. Tolerance is js14 for Frame 40 and Frame 63.

Discontinued Rod-end Accessories

Components are designed to metric dimensions. Inch dimensions are approximate conversions from millimeters. Dimensions without tolerances are for reference.



Rod-eye Attachment

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Attachment includes:

- 1 Rod eye
- 1 Hex nut

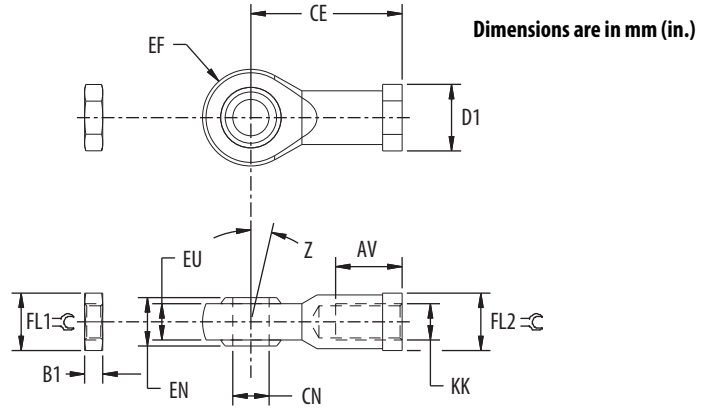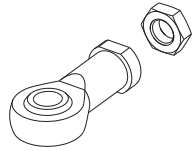

Cat. No. ⁽¹⁾	Cat. No. ⁽²⁾ Corrosion Resistant	Frame	AV ⁽³⁾ mm (in.)	B1 mm (in.)	CE mm (in.)	CN mm (in.) H7	D1 mm (in.)	EF ⁽⁴⁾ mm (in.)	EN mm (in.)	EU mm (in.)	Z Angle	FL1 mm ⌀	FL2 mm ⌀
MPAR-NE9261	MPAR-NE195582	32	20.0 (0.79)	5.0 (0.20)	43.0 (1.69)	10.0 (0.39)	19.0 (0.75)	14.0 (0.55)	14.0 (0.55)	10.5 (0.41)	13°	17	17
MPAR-NE9262	MPAR-NE195583	40	22.0 (0.87)	6.0 (0.24)	50.0 (1.97)	12.0 (0.47)	22.0 (0.87)	16.0 (0.63)	16.0 (0.63)	12.0 (0.47)	13°	19	19
MPAR-NE9263	MPAR-NE195584	63	28.0 (1.10)	8.0 (0.31)	64.0 (2.52)	16.0 (0.63)	27.0 (1.06)	21.0 (0.83)	21.0 (0.83)	15.0 (0.59)	15°	24	22


(1) Material is galvanized steel and subject to moderate corrosion stress. Contains no copper, PTFE, or silicone.

(2) Material is high-alloy steel for environments requiring higher corrosion resistance. Contains no copper, PTFE, or silicone.

(3) Tolerance for this dimension is -2.0 mm (-0.079 in.).

(4) Tolerance for this dimension is ±0.5 mm (±0.020 in.).


Rod Clevis (threaded rod) Attachment

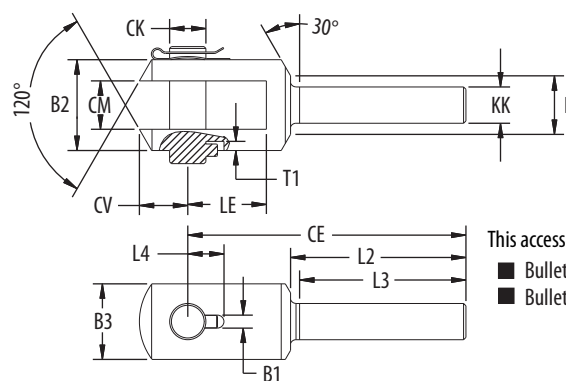


Dimensions are in mm (in.)

Attachment includes:

- 1 Rod clevis
- 1 Pivot pin ⁽²⁾
- 1 Retaining clip

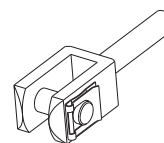

Use the rod clevis in combination with the rod eye for spherical mounting of cylinders.

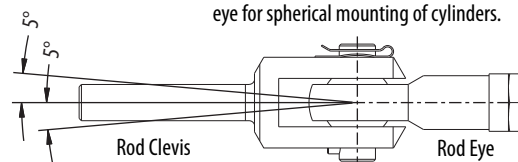

This accessory applies to:


- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Frame	B1 mm (in.)	B2 mm (in.) d12	B3 mm (in.)	CE mm (in.)	CK mm (in.) F7/h9	CM mm (in.) B12	CV mm (in.)	D1 mm (in.)	L2 mm (in.)	L3 mm (in.)	L4 mm (in.)	LE mm (in.)	T1 mm (in.)	KK
MPAR-NE32954	32	3.3 (0.13)	28.0 (1.10)	20.0 (0.79)	78.0 (3.07)	10.0 (0.39)	14.0 (0.55)	12.0 (0.47)	18.0 (0.71)	53.0 (2.09)	50.0 (1.97)	11.0 (0.43)	20.0 (0.79)	3.0 (0.12)	M10x1.25
MPAR-NE10767	40	4.3 (0.17)	30.0 (1.18)	25.0 (0.98)	92.0 (3.62)	12.0 (0.47)	16.0 (0.63)	16.0 (0.63)	19.0 (0.75)	58.0 (2.28)	55.0 (2.17)	12.0 (0.47)	26.0 (1.02)	3.0 (0.12)	M12x1.25
MPAR-NE10768	63	4.3 (0.17)	40.0 (1.57)	35.0 (1.38)	108 (4.25)	16.0 (0.63)	21.0 (0.83)	21.0 (0.83)	24.0 (0.94)	65.0 (2.56)	62.0 (2.44)	14.0 (0.55)	31.0 (1.22)	3.0 (0.12)	M16x1.50

(1) Material is galvanized steel and subject to moderate corrosion stress. Contains no copper, PTFE, or silicone.


(2) The pivot pin is secured against rotation with a dowel pin.

Rod Clevis Attachment (corrosion resistant)

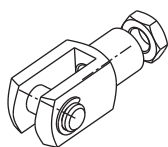

Attachment includes:

- 1 Rod clevis
- 1 Pivot pin
- 1 Hex nut

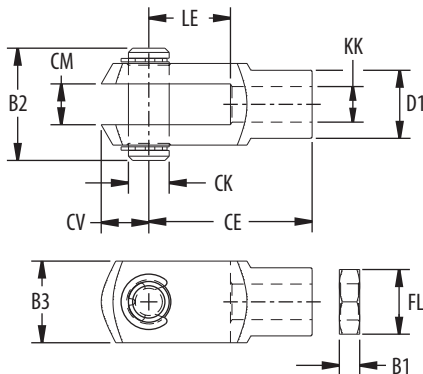

Dimensions are in mm (in.)

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

Cat. No. ⁽¹⁾	Frame	B1 mm (in.)	B2 mm (in.)	B3 mm (in.)	CE ⁽²⁾ mm (in.)	CK mm (in.) H9	CM mm (in.)	CV mm (in.)	D1 mm (in.)	LE ⁽³⁾ mm (in.)	FL1 mm ⌀	KK
MPAR-NE13569	32	5.0 (0.20)	27.0 (1.06)	20.0 (0.79)	40.0 (1.57)	10.0 (0.39)	10.0 ⁽⁴⁾ (0.39)	12.0 (0.47)	18.0 (0.71)	20.0 (0.79)	16	M10x1.25
MPAR-NE13570	40	6.0 (0.24)	33.0 (1.30)	24.0 (0.94)	48.0 (1.89)	12.0 (0.47)	12.0 ⁽⁵⁾ (0.47)	14.0 (0.55)	20.0 (0.79)	24.0 (0.94)	18	M12x1.25
MPAR-NE13571	63	8.0 (0.31)	43.0 (1.69)	32.0 (1.26)	64.0 (2.52)	16.0 (0.63)	16.0 ⁽⁵⁾ (0.63)	19.0 (0.75)	26.0 (1.02)	32.0 (1.26)	24	M16x1.50

(1) Material is high-alloy steel for environments requiring higher corrosion resistance. Contains no copper, PTFE, or silicone.


(2) Tolerance for this dimension is ± 0.4 (0.016 in.).

(3) Tolerance for this dimension is ± 0.5 (0.019 in.).

(4) Tolerance for this dimension is B13.

(5) Tolerance for this dimension is a range between +0.7...+0.15 mm (+0.027...0.006 in.).

Coupling Piece Attachment

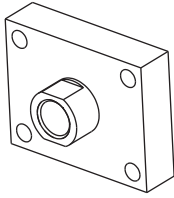


Attachment includes:

- 1 Flange plate
- 1 Threaded coupling

This accessory applies to:

- Bulletin MPAR In-line
- Bulletin MPAR Parallel

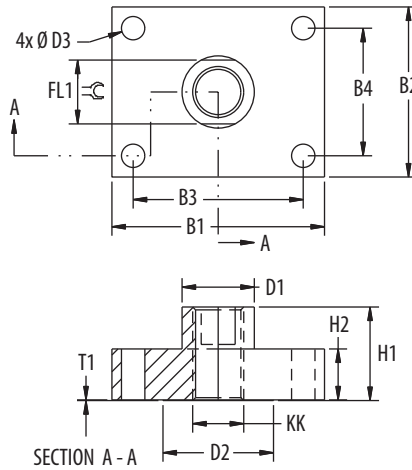

Dimensions are in mm (in.)

Cat. No. ^{(1) (2)}	Frame	B1 mm (in.)	B2 mm (in.)	B3 mm (in.)	B4 mm (in.)	D1 ⁽³⁾ mm (in.)	D2 mm (in.)	D3 mm (in.) H13	H1 mm (in.)	H2 mm (in.)	T1 mm (in.)	FL1 mm 	KK
MPAR-NE36125	32	40.0 (1.57)	35.0 (1.38)	30.0 (1.18)	25.0 (0.98)	17.0 (0.67)	26.0 (1.02)	5.5 (0.22)	20.0 (0.79)	10.0 (0.39)	0.10 (0.004)	15	M10x1.25
MPAR-NE36126	40	50.0 (1.97)	40.0 (1.57)	40.0 (1.57)	30.0 (1.18)	17.0 (0.67)	26.0 (1.02)	5.5 (0.22)	22.0 (0.87)	12.0 (0.47)	0.10 (0.004)	15	M12x1.25
MPAR-NE36127	63	60.0 (2.36)	45.0 (1.77)	48.0 (1.89)	33.0 (1.30)	22.0 (0.87)	34.0 (1.34)	6.6 (0.26)	25.0 (0.98)	12.0 (0.47)	0.10 (0.004)	19	M16x1.50

(1) Material is galvanized steel and subject to moderate corrosion stress. Contains no copper, PTFE, or silicone.

(2) Coupling is for non-rotating piston rods with male threads. You can use these coupling pieces to connect a cylinder with a non-rotating piston rod to another component with a defined orientation, without rotating either the cylinder or the other component.

(3) Tolerance for this dimension is -0.2 mm (-0.008 in.).

Specifications

MP-Series Electric Cylinders General Specifications

Attribute	Frame 32	Frame 40	Frame 63
Construction design	Ballscrew driven non-rotating piston rod		
Piston rod thread	M10x1.25	M12x1.25	M16x1.50
Working stroke	100...400 mm (3.9...15.7 in.)	100...600 mm (3.9...23.6 in.)	100...800 mm (3.9...31.5 in.)
Protection against torsion/guide	Plain bearing guide		
Stroke reserve	0 mm		
Angle of rotation at the piston rod, max	±0.30°	±0.25°	±0.20°
Impact energy (E) at the end positions $E = 0.5 \times m \times v^2$	0.0001 J	0.0002 J	0.0004 J
Positioning repeatability, max	±0.02 mm (0.0008 in.)		
Reversing backlash, max ⁽¹⁾	0.05 mm (0.002 in.), max		
Duty cycle	100%		
Position sensing (feedback)	Multi-turn absolute encoder		
Type of mounting	Via female threads		
	Via accessories		
Mounting position	Any		

(1) In new condition.

MP-Series Electric Cylinders Performance Specifications

Cat. No. ⁽¹⁾	Frame	Max Feed Force N (lb)	Continuous Feed Force N (lb)	Max Speed m/s (in/s)	Stroke Lengths mm (in.)	Max Acceleration m/s ² (in/s ²)
MPAR-x1xxxB	32	300 (67)	240 (54)	0.15 (5.9)	100 (3.94) 200 (7.87)	6.0 (236)
MPAR-x1xxxE		350 (79)	280 (63)	0.50 (19.7)	300 (11.81) 400 (15.75)	
MPAR-x2xxxC	40	525 (118)	420 (94)	0.25 (9.8)	100 (3.94) 200 (7.87)	
MPAR-x2xxxF		800 (180)	640 (144)	0.64 (25.2)	300 (11.81) 400 (15.75) 600 (23.62)	
MPAR-x3xxxE	63	2500 (562)	2000 (450)	0.50 (19.7)	100 (3.94) 200 (7.87)	
MPAR-x3xxxH		1625 (365)	1300 (292)	1.0 (39.4)	300 (11.81) 400 (15.75) 600 (23.62) 800 (31.50)	

(1) Stroke length replaces xxx in each catalog number.

Moving Load Specifications

Attribute	MPAR-x1xxxB	MPAR-x1xxxE	MPAR-x2xxxC	MPAR-x2xxxF	MPAR-x3xxxE	MPAR-x3xxxH
	Frame 32, Weight, approx. g (oz)		Frame 40, Weight, approx. g (oz)		Frame 63, Weight, approx. g (oz)	
Moving load with 0 mm stroke	170 (6.0)	200 (7.05)	310 (10.93)	380 (13.40)	810 (28.57)	810 (1.79)
Moving load per 10 mm stroke	6.9 (0.24)	6.9 (0.24)	8.9 (0.31)	8.9 (0.31)	12.8 (0.45)	12.8 (0.028)

Brake Specifications

Electric Cylinder Cat. No.	Holding Force N (lb)	Coil Current at 24V DC A	Brake Response Time		
			Release ⁽¹⁾ ms	Engage (using external arc-suppression device)	
				MOV ⁽²⁾ ms	Diode ⁽³⁾ ms
MPAR-A/B1xxxB	300 (67)	0.43...0.53	23	9	18
MPAR-A/B1xxxE	350 (79)				
MPAR-A/B2xxxC	525 (118)				
MPAR-A/B2xxxF	800 (180)	0.46...0.56	58	20	42
MPAR-A/B3xxxE	2364 (531)	0.45...0.55	50	20	110
MPAR-A/B3xxxH	1625 (365)	0.576...0.704	110	25	160

(1) Brake release time delay with voltage applied.

(2) Brake engage time delay with voltage removed and MOV used for arc suppression.

(3) Brake engage time delay with voltage removed and diode used for arc suppression.

Environmental Specifications

Attribute	Value
Temperature, ambient	0...40 °C (32...104 °F)
Temperature, storage	-25...60 °C (-13...140 °F)
Relative humidity (non-condensing)	5...95%
Shock	20 g peak, 6 ms duration
Vibration	2.5 g peak @ 30...2000 Hz

Weight Specifications

Electric Cylinders (weight of cylinder with non-brake motor)

Electric Cylinder Cat. No.	Weight, approx. ⁽¹⁾ kg (lb)
MPAR-x1100B-V2A	2.6 (5.73)
MPAR-x1100B-V2B/D/E	3.5 (7.72)
MPAR-x1200B-V2A	2.9 (6.39)
MPAR-x1200B-V2B/D/E	3.8 (8.377)
MPAR-x1300B-V2A	3.2 (7.05)
MPAR-x1300B-V2B/D/E	4.1 (9.04)
MPAR-x1400B-V2A	3.5 (7.72)
MPAR-x1400B-V2B/D/E	4.5 (9.92)
MPAR-x1100E-V2A	3.0 (6.61)
MPAR-x1100E-V2B/D/E	3.8 (8.377)
MPAR-x1200E-V2A	3.3 (7.27)
MPAR-x1200E-V2B/D/E	4.1 (9.04)
MPAR-x1300E-V2A	3.6 (7.94)
MPAR-x1300E-V2B/D/E	4.5 (9.92)
MPAR-x1400E-V2A	4.0 (8.82)
MPAR-x1400E-V2B/D/E	4.8 (10.58)

Electric Cylinder Cat. No.	Weight, approx. kg (lb)
MPAR-x2100C-V2A	3.7 (8.16) ⁽¹⁾
MPAR-x2100C-V2B/D/E	4.4 (9.70) ⁽¹⁾
MPAR-x2200C-V2A	4.1 (9.04) ⁽¹⁾
MPAR-x2200C-V2B/D/E	4.9 (10.80) ⁽¹⁾
MPAR-x2300C-V2A	4.6 (10.14) ⁽¹⁾
MPAR-x2300C-V2B/D/E	5.3 (11.68) ⁽¹⁾
MPAR-x2400C-V2A	5.0 (11.02) ⁽¹⁾
MPAR-x2400C-V2B/D/E	5.8 (12.79) ⁽¹⁾
MPAR-x2600C-V2A	6.0 (11.02) ⁽¹⁾
MPAR-x2600C-V2B/D/E	6.7 (14.77) ⁽¹⁾
MPAR-x2100F-V2A	4.2 (9.26) ⁽²⁾
MPAR-x2100F-V2B/D/E	6.5 (14.33) ⁽²⁾
MPAR-x2200F-V2A	4.7 (10.36) ⁽²⁾
MPAR-x2200F-V2B/D/E	7.0 (15.43) ⁽²⁾
MPAR-x2300F-V2A	5.2 (11.46) ⁽²⁾
MPAR-x2300F-V2B/D/E	7.5 (16.53) ⁽²⁾
MPAR-x2400F-V2A	5.6 (12.34) ⁽²⁾
MPAR-x2400F-V2B/D/E	7.9 (17.42) ⁽²⁾
MPAR-x2600F-V2A	6.6 (14.55) ⁽²⁾
MPAR-x2600F-V2B/D/E	8.9 (19.62) ⁽²⁾

Electric Cylinder Cat. No.	Weight, approx. kg (lb)
MPAR-x3100E-M2A	9.5 (20.94) ⁽³⁾
MPAR-x3100E-M2B/D/E	13.6 (29.98) ⁽³⁾
MPAR-x3200E-M2A	10.3 (22.71) ⁽³⁾
MPAR-x3200E-M2B/D/E	14.4 (31.75) ⁽³⁾
MPAR-x3300E-M2A	11.1 (24.47) ⁽³⁾
MPAR-x3300E-M2B/D/E	15.2 (33.51) ⁽³⁾
MPAR-x3400E-M2A	11.9 (26.23) ⁽³⁾
MPAR-x3400E-M2B/D/E	16.1 (35.49) ⁽³⁾
MPAR-x3600E-M2A	13.5 (29.76) ⁽³⁾
MPAR-x3600E-M2B/D/E	17.7 (39.02) ⁽³⁾
MPAR-x3800E-M2A	15.2 (33.51) ⁽³⁾
MPAR-x3800E-M2B/D/E	19.3 (42.55) ⁽³⁾
MPAR-x3100H-M2A	9.3 (20.50) ⁽⁴⁾
MPAR-x3100H-M2B/D/E	13.2 (29.10) ⁽⁴⁾
MPAR-x3200H-M2A	10.1 (22.27) ⁽⁴⁾
MPAR-x3200H-M2B/D/E	14.0 (30.86) ⁽⁴⁾
MPAR-x3300H-M2A	10.9 (24.03) ⁽⁴⁾
MPAR-x3300H-M2B/D/E	14.8 (32.63) ⁽⁴⁾
MPAR-x3400H-M2A	11.7 (25.79) ⁽⁴⁾
MPAR-x3400H-M2B/D/E	15.7 (34.61) ⁽⁴⁾
MPAR-x3600H-M2A	13.4 (29.54) ⁽⁴⁾
MPAR-x3600H-M2B/D/E	17.3 (38.14) ⁽⁴⁾
MPAR-x3800H-M2A	15.0 (33.07) ⁽⁴⁾
MPAR-x3800H-M2B/D/E	18.9 (41.67) ⁽⁴⁾

(1) If you are ordering an MPAR-x1xxx-V4x or MPAR-x2xxx-V4x electric cylinder with brake, add 0.2 kg (0.4 lb).

(2) If you are ordering an MPAR-x2xxx-V4x electric cylinder with brake, add 0.4 kg (0.9 lb).

(3) If you are ordering an MPAR-x3xxx-V4x electric cylinder with brake, add 1.0 kg (2.2 lb).

(4) If you are ordering an MPAR-x3xxxH-M4x electric cylinder with brake, add 1.7 kg (3.7 lb).

Actuator Cylinders (weight of replacement cylinder)

Actuator Cylinder⁽¹⁾ Cat. No.	Weight, approx. kg (lb)
MPAR-X1100B	1.1 (2.43)
MPAR-X1200B	1.4 (3.09)
MPAR-X1300B	1.7 (3.75)
MPAR-X1400B	2.1 (4.63)
MPAR-X1100E	1.1 (4.63)
MPAR-X1200E	1.4 (3.09)
MPAR-X1300E	1.8 (3.97)
MPAR-X1400E	2.1 (4.63)

Actuator Cylinder⁽¹⁾ Cat. No.	Weight, approx. kg (lb)
MPAR-X2100C	1.7 (3.75)
MPAR-X2200C	2.2 (4.85)
MPAR-X2300C	2.6 (5.73)
MPAR-X2400C	3.1 (6.83)
MPAR-X2600C	4.0 (8.82)
MPAR-X2100F	1.8 (3.97)
MPAR-X2200F	2.3 (5.07)
MPAR-X2300F	2.8 (6.17)
MPAR-X2400F	3.2 (7.05)
MPAR-X2600F	4.2 (9.26)

Actuator Cylinder⁽¹⁾ Cat. No.	Weight, approx. kg (lb)
MPAR-X3100E	3.8 (8.38)
MPAR-X3200E	4.6 (10.14)
MPAR-X3300E	5.4 (11.90)
MPAR-X3400E	6.3 (13.89)
MPAR-X3600E	7.9 (17.46)
MPAR-X3800E	9.5 (20.94)
MPAR-X3100H	3.8 (8.38)
MPAR-X3200H	4.6 (10.14)
MPAR-X3300H	5.4 (11.90)
MPAR-X3400H	6.3 (13.89)
MPAR-X3600H	7.9 (17.42)
MPAR-X3800H	9.5 (20.94)

(1) Replacement actuator cylinder example, if ordering a replacement cylinder for electric cylinder catalog number MPAR-A2100C-V2A the replacement actuator cylinder is catalog number MPAR-X2100C.

See the MP-Series Replacement Parts (series A and B) Installation Instructions, publication [MPAR-IN004](#), for procedures to replace electric cylinder parts and to obtain other replacement part catalog numbers.

Additional Resources

These documents contain additional information concerning related Rockwell Automation products.

Resource	Description
MP-Series Electric Cylinders (series B and C) Installation Instructions, publication MPAR-IN001	Information on installing, configuring, startup, and troubleshooting MP-Series Electric Cylinders.
MP-Series Electric Cylinder Replacement Parts (series B and C) Installation Instructions, publication MPAR-IN002	Information on replacing actuator cylinders, motors, couplings, and belts.
MP-Series (series A and B) and TL-Series Electric Cylinders Replacement Parts, publication MPAR-IN004	
MP-Series Low-inertia Brushless Servo Motors with 100 mm and 165 mm Frame Sizes, publication MP-IN001	Information on installing 100...165 mm frame size MP-Series low-inertia motors.
MP-Series Low-inertia Brushless Servo Motors with 75 mm or Smaller Frame Sizes, publication MP-IN006	Information on installing, small frame (≤ 75 mm) MP-Series low-inertia motors.
Kinetix 2000 Multi-axis Servo Drive User Manual, publication 2093-UM001	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 2000 drive.
Ultra3000 Digital Servo Drives Installation Manual, publication 2098-IN003	Information on how to install, set up, and troubleshoot an Ultra3000 servo drive.
Ultra3000 Digital Servo Drives Integration Manual, publication 2098-IN005	
Kinetix 6000 Multi-axis Servo Drives User Manual, publication 2094-UM001	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 6000 drive.
Kinetix 300 EtherNet/IP Indexing Servo Drives User Manual, publication 2097-UM001	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 300 drive.
Kinetix 350 Single-axis EtherNet/IP Servo Drive User Manual, publication 2097-UM002	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 350 drive.
Kinetix 5500 Servo Drives User Manual, publication 2198-UM001	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 5500 drive.
Kinetix 5700 Servo Drives User Manual, publication 2198-UM002	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinder and a Kinetix 5700 drive.
Kinetix 6200 and Kinetix 6500 Modular Multi-axis Servo Drive User Manual, publication 2094-UM002	Information on installing, configuring, startup, and troubleshooting a servo drive system with an electric cylinders and a Kinetix 6200 or Kinetix 6500 drive.
Motion Analyzer System Sizing and Selection Tool website https://motionanalyzer.rockwellautomation.com/	Comprehensive motion application sizing tool used for analysis, optimization, selection, and validation of your Kinetix Motion Control system.
System Design for Control of Electrical Noise Reference Manual, publication GMC-RM001	Information, examples, and techniques designed to minimize system failures caused by electrical noise.
Kinetix Motion Control Selection Guide, publication KNX-SG001	Specifications, motor/servo-drive system combinations, and accessories for Kinetix motion control products.

You can view or download publications at <https://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

Notes:

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	https://rockwellautomation.custhelp.com/
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.



At the end of its life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Kinetix, MP-Series, Rockwell Automation, Rockwell Software, RSLogix 5000, and Ultra are trademarks of Rockwell Automation, Inc.
Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication MPAR-IN003A-EN-P - May 2018

Copyright © 2018 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.