
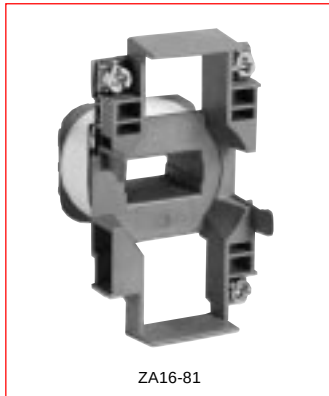


Accessories

for A, AE, BC contactors & KC control relays

Coils & coil voltage codes



Coils — AC operated

For contactors	Catalog number	List price
A9 – A16	ZA16-★	
A26 – A40	ZA40-★	
A45 – A75	ZA75-★	
A95 – A110	ZA110-★	

Coils — DC operated

KC and BC9 – BC30	KBC30G-★	
AE45 – AE75	ZAE75-★	
AE95 – AE110	ZAE110-★	
Auxiliary including an insertion contact and a varistor for DC operated contactors	CDL5-01	
AE45 – AE75	CCL5-01	
AE95 – AE110		

★ – Coil voltage suffix. Refer to Coil Voltage Selection charts below and substitute the desired coil voltage code for the ★.

Coil voltage selection — AC Operated

for A9 – A110; UA26 – UA95

VAC (50Hz)	VAC (60Hz)	Voltage Code
24	24	81
26	28	16
28	32	17
42	42	82
48	48	83
60	60	73
100	100 – 110	74
110	110 – 120	84
110 – 115	115 – 127	89
120	140	29
125 – 127	150	30
175	208	34
190	220	36

VAC (50Hz)	VAC (60Hz)	Voltage Code
200	200 – 220	75
220 – 230	230 – 240	80
230 – 240	240 – 260	88
230 – 240	277	42
230/400 ^①	—	62
—	230/400 ^①	63
—	380	48
380 – 400	400 – 415	85
400 – 415	415 – 440	86
—	480	51
440	500	53
500	600	55
550	—	56
660 – 690	—	58

Coil voltage selection — DC Operated

for AE & BC contactors; KC control relays

VDC	Voltage code	
	KC Control relays BC Contactors	AE Contactors
12	07	80
24	01	81
42	02	82
48	16	83
50	17	21
60	03	84

VDC	Voltage code	
	KC Control relays BC Contactors	AE Contactors
75	22	85
110	04	86
125	27	87
220	05	88
240	33	89
250	34	38

^① Dual voltage coil for N, A9 - A16 only.