Series P9

Nomenclature

Standard & illuminated push-buttons

P9		P				
Style		**Type**	**Type**	**Cap colour**	**Push-button type**	**Lens type**
M = Round satin chrome		**P** = Push button	**N** = Non illuminated	**0** = No cap	**G** = Flush	**D** = Diffused for illuminated push button only
X = Round plastic			**L** = Illuminated	**N** = Black	**S** = Extended	
S = Square plastic				**R** = Red	**E** = Recessed	
				V = Green		
				G = Yellow		
				L = Blue		
				B = White		
				M = Brown		
				H = Grey		

Double function push-buttons

P9	D	P	L			
Style		**Type**	**Type**	**Cap colour**	**Push-button type**	**ISO symbols**
		P = Push button	**L** = Illuminated	**V** = Green	**G** = Flush	**00** = No sym.
				N = Black	**S** = Top flush bottom extended	**01** = With sym.

Pilot lights

P9						
Style		**Type**	**Colour**	**Lens type**	**For Unibloc type only**	
M = Round satin chrome		**L** = Standard	**R** = Red	**D** = Diffused	**D0** = Full voltage	
X = Round plastic		**U** = Unibloc	**V** = Green	**R** = Refraced	**RN** = With resistor	
S = Square plastic			**G** = Yellow	**V** = Glass		
			L = Blue			
			B = White			
			I = Clear			
			A = Orange			

Mushroom head push-buttons

P9		E				
Style		**Type**	**Mushroom diameter**	**Colour**	**Illumination**	**Key selection**
M = Round satin chrome		**M** = Momentary	**3** = Ø 28 mm	**N** = Black	**N** = Non illuminated	See key selection table on E.16
X = Round plastic		**T** = Push/Pull	**4** = Ø 40 mm	**R** = Red	**L** = Illuminated	
S = Square plastic		**R** = Turn to reset	**6** = Ø 60 mm	**V** = Green		
		C = Key to reset		**G** = Yellow		

Nomenclature

Knob & lever selector switches

P9		S				
Style	**Type**	**Type**	**Cam**	**Spring return**	**Colour**	
M = Round satin chrome **X** = Round plastic **S** = Square plastic		**M** = Knob **V** = Lever **L** = Illuminated knob **A** = Illuminated lever	**D**, **I** or **H** = 2 positions **E**, **L**, **U** or **Z** = 3 positions **X** = 4 positions **Y** or **W** = 5 positions	**2/4 Positions** **0** = Fixed **5** = From right **3 Positions** **0** = Fixed **1** = From left **5** = From right **3** = From left & right	**N** = Black **R** = Red **V** = Green **G** = Yellow **L** = Blue	

Key selector switches

P9		S	C				
Style	**Type**		**Cam**	**Spring return**	**Key removal**	**Key selection**	
M = Round satin chrome **X** = Round plastic **S** = Square plastic			**D**, **I** or **H** = 2 positions **E**, **L**, **U** or **Z** = 3 positions **X** = 4 positions	**2/4 Positions** **0** = Fixed **5** = From right **3 Positions** **0** = Fixed **1** = From left **5** = From right **3** = From left & right	See key removal position	See key selection table on E.16	

Contact blocks

P9	B				
Style	**Contacts**	**Terminal type**	**Contact type**		
	0 1 = 1 NC **1 0** = 1 NO **1 1** = 1 NO + 1 NC	**V** = Standard screw **F** = Faston **B** = Base mounting screw **T** = Time delay screw	**N** = Normal **A** = Early closing **R** = Late opening **3** = Time delay 0,1 - 30s **8** = Time delay 10 - 180s		

Power supplies

P9		P				
Style	**Type**	**Style**	**Terminal type**	**Voltage**		
	D = Full voltage **T** = Transfo. **R** = Resistor	**N** = Normal **D** = Diode **L** = Long life **T** = Test **M** = Multi-function (contin. blinking)	**V** = Standard screw **F** = Faston **B** = Base mounting screw	**0** = Full voltage **D** = 24V **J** = 110-120V **L** = 125-127V **N** = 220-250V **U** = 380V **W** = 415-440V **Y** = 480-500V		

Selector switches with lever
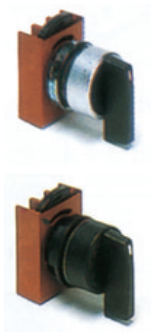
2 positions		Function (1)	Cat. no.	Ref. no. see bottom	Cat. no.	Ref. no. see bottom	
			Metal		Plastic		
			○		●		
Fixed		D	**P9MSVD0●**		**P9XSVD0●**		
		I	P9MSVI0●		P9XSVI0●		
		H	P9MSVH0●		P9XSVH0●		
With spring return		D	P9MSVD5●		P9XSVD5●		
		I	P9MSVI5●		P9XSVI5●		
		H	P9MSVH1●		P9XSVH1●		
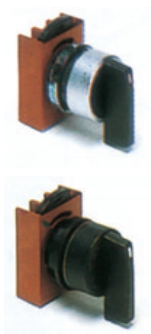
3 positions							
Fixed		E	P9MSVE0●		P9XSVE0●		
		L	P9MSVL0●		P9XSVL0●		
		U	P9MSVU0●		P9XSVU0●		
		Z, B	**P9MSVZ0●**		**P9XSVZ0●**		
With spring return		E	P9MSVE1●		P9XSVE1●		
		L	P9MSVL1●		P9XSVL1●		
		U	P9MSVU1●		P9XSVU1●		
		Z;B	P9MSVZ1●		P9XSVZ1●		
		E	P9MSVE5●		P9XSVE5●		
		L	P9MSVL5●		P9XSVL5●		
		U	P9MSVU5●		P9XSVU5●		
		Z, B	P9MSVZ5●		P9XSVZ5●		
		E	P9MSVE3●		P9XSVE3●		
		L	P9MSVL3●		P9XSVL3●		
		U	P9MSVU3●		P9XSVU3●		
		Z, B	**P9MSVZ3●**		**P9XSVZ3●**		
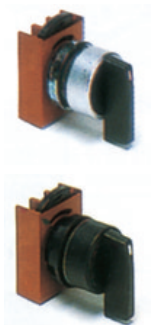
4 positions							
Fixed		X	P9MSVX0●		P9XSVX0●		
With spring return		X	P9MSVX5●		P9XSVX5●		

5 positions							
Fixed		X	P9MSVY0●		P9XSVY0●		
		W	P9MSVW0●		P9XSVW0●		

(1) Electrical diagrams, see E.24   The catalogue numbers **in bold** are available from stock.

Colours		black	red	green	yellow	bleu
Levers	●	N	R	V	G	L