

1605586

https://www.phoenixcontact.com/pc/products/1605586

Please be informed that the data shown in this PDF document is generated from our online catalog. Please find the complete data in the user documentation. Our general terms of use for downloads are valid.



Device connector front mounting, angled rotatable, for standard and SPEEDCON interlock, M23, number of positions: 4+3+PE, contact connection type: Pin, Axial O-ring, 4x Ø 3.2, shielded: yes, flange dimensions: 26 mm x 26 mm, degree of protection: IP67, cable diameter range: 0 mm ... 0 mm, number of positions: 8, connection method: Crimp connection, series: SF

Commercial data

Item number	1605586
Packing unit	1 pc
Minimum order quantity	1 pc
Product key	ABRBFM
Catalog page	Page 81 (PC-2011)
GTIN	4046356182201
Weight per piece (including packing)	137.5 g
Weight per piece (excluding packing)	118.47 g
Customs tariff number	85366990
Country of origin	DE



1605586

https://www.phoenixcontact.com/pc/products/1605586

Technical data

Notes

WARNING: The connectors may not be plugged in or disconnected under load. Ignoring the warning or improper use may damage persons and/or property. • WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install an operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical personnel person		
Safety note WARNING: The connectors may not be plugged in or disconnected under load. (gnoring the warning or improper use may damage persons and/or property. - WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. - WARNING: Only electrically updified personnel may install an operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics or electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the pacing indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. - The products are suitable for applications in plant, controller, and electrical device engineering. - When operating the connectors in outdoor applications, they must be separately protected against environmental influences. - Assembled products may not be manipulated or improperly opened. - Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phenoixontat comproducts). - When using the product in direct connection with third-party manufacturers, the user is responsible. - For operating voltages > 50 V AC, conductive connector housings must be grounded - Ensure that the protective or functional ground has been properly connected. - VDE 0100/197 § 41.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector - Only use tools recommended by Phoenix Contact - The installation notes/Design In documents online on the download page at phoenix contact. Com/products must be observed for this product. - Operate the connector only when it is fully plugged in and interiocked. - The installation notes/Design In documents online on the connectors does not exceed the upper limit specified in	Order information:	Order crimp contacts 4 x Ø 1 mm, 4 x Ø 2 mm separately
disconnected under load. (gnoring the warning or improper use may damage persons and/or property. • WARNING: Commission property functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install an operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the following safety notes. The qualified personnel must be familiar with the fortical engineering. They must be able recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical personnel and personnel must be familiar with electrical recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical region and prevent danger. The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g., the ones listed in the product accessories online at phoenixcontact.com/products). • When using the product in direct connection with third-party manifacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector of the product in the standards on the connector only when it is fully plugged in and interlocked. • The installation notest/Design in documents online on the download page at phoenixcontact.com/products must be observed for this p	afety note	
The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible. • WARNING: Only electrically qualified personnel may install an operate the product. They must observe the following safety notes. The qualified personnel may the product of the receptive and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g., the ones listed in the product accessories online at phoenixcontact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 01001/197 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that then laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it.	-	disconnected under load. Ignoring the warning or improper use
operate the product. They must observe the following safety notes. The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. • The products are suitable for applications in plant, controller, and electrical device engineering. • When operating the connectors in outdoor applications, they must be separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontactom/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it. • The connector warms up in normal operation. Depending on it ambient conditions, the surface of the connector an continue to		The products must be regularly inspected for damage. Decommission defective products immediately. Replace
and electrical device engineering. When operating the connectors in outdoor applications, they must be separately protected against environmental influences. Assembled products may not be manipulated or improperly opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		notes. The qualified personnel must be familiar with the basics o electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are
must be separately protected against environmental influences. Assembled products may not be manipulated or improperly opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on it ambient conditions, the surface of the connector can continue to		· · · · · · · · · · · · · · · · · · ·
opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixocntac.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		
data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it.		
manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it. • The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		data of the standards listed (e.g. the ones listed in the product
housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it. • The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		· · ·
properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Operate the connector only when it is fully plugged in and interlocked. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable without twisting it. • The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		
are applicable when combining several circuits in a cable and/or connector Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		· · · · · · · · · · · · · · · · · · ·
 The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to 		 VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector
download page at phoenixcontact.com/products must be observed for this product. Operate the connector only when it is fully plugged in and interlocked. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		Only use tools recommended by Phoenix Contact
 Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to 		download page at phoenixcontact.com/products must be
connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable without twisting it. The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		
cable without twisting it. • The connector warms up in normal operation. Depending on the ambient conditions, the surface of the connector can continue to		connectors does not exceed the upper limit specified in the
ambient conditions, the surface of the connector can continue to		· · · · · · · · · · · · · · · · · · ·
		 The connector warms up in normal operation. Depending on th ambient conditions, the surface of the connector can continue to warm up. In this case, the user is responsible for posting



1605586

https://www.phoenixcontact.com/pc/products/1605586

	warnings (e.g. DIN EN ISO 13732-1:2008-12).
unting	
Mounting type	Front mounting
Mounting	4x Ø 3.2
duct properties	
Product type	Circular connectors (device side)
Series	SF
Application	Power
Number of positions	8
Connection profile	4+3+PE
Shielded	yes
Coding	N
Thread type	M23
nensions	
lousing	
Flange dimensions	26 mm x 26 mm
terial specifications	
Seal material	FPM
Housing material	Metal
Housing material	Turned parts: copper zinc alloy (CuZn), die-cast parts: zinc (GIZn)
Insulator material	PA 6.6
Gasket and O-ring material	FPM
ctrical properties	
Contact diameter	2 mm
Max. current	30 A
Nominal voltage U _N	630 V
Overvoltage category	III
Degree of pollution	3
	6 kV
Rated surge voltage	
	1 mm
Contact	1 mm 9 A
Contact Contact diameter	
Contact Contact diameter Max. current	9 A
Contact Contact diameter Max. current Nominal voltage U _N	9 A 250 V



1605586

https://www.phoenixcontact.com/pc/products/1605586

Connection data

Conductor connection

Connection method	Crimp connection
Contact connection type	Pin

Connector

Туре	angled rotatable

Cable/line

External cable diameter	0 mm 0 mm
External dable diameter	0 111111 0 111111

Environmental and real-life conditions

Ambient conditions

Degree of protection	IP67
Ambient temperature (operation)	-40 °C 125 °C
Altitude	3000 m




1605586


https://www.phoenixcontact.com/pc/products/1605586

Drawings

Dimensional drawing

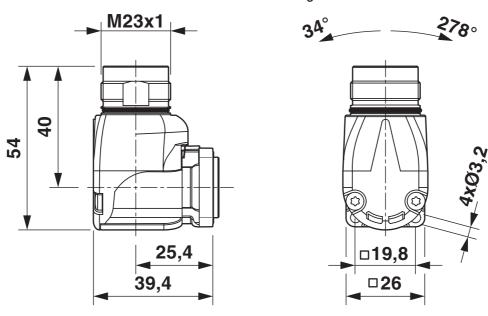

Dimensional drawing

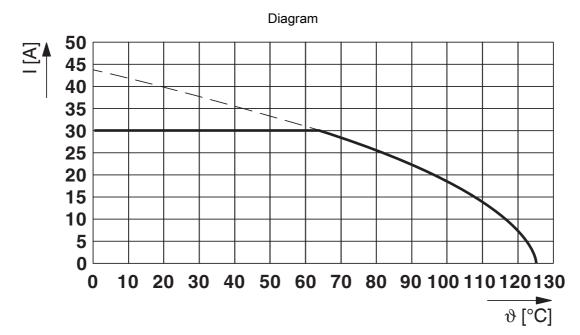


I = current strength, T = ambient temperature



1605586

https://www.phoenixcontact.com/pc/products/1605586

Schematic diagram

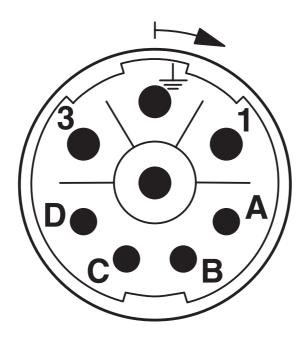


Connector pin assignment



1605586

https://www.phoenixcontact.com/pc/products/1605586

Dimensional drawing

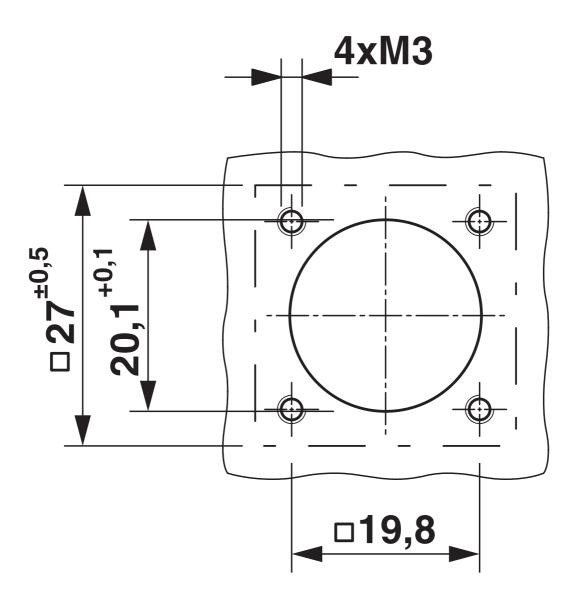

Installation dimensions



1605586

https://www.phoenixcontact.com/pc/products/1605586

Classifications

ECLASS

	ECLASS-11.0	27440102
	ECLASS-12.0	27440116
	ECLASS-13.0	27440116
ETIM		
	ETIM 9.0	EC002635
UNSPSC		
	UNSPSC 21.0	39121400



1605586

https://www.phoenixcontact.com/pc/products/1605586

Environmental product compliance

EU RoHS

Fulfills EU RoHS substance requirements	Yes, No exemptions
China RoHS	
Environment friendly use period (EFUP)	EFUP-E
	No hazardous substances above the limits
EU REACH SVHC	
REACH candidate substance (CAS No.)	No substance above 0.1 wt%

Phoenix Contact 2024 @ - all rights reserved https://www.phoenixcontact.com

PHOENIX CONTACT GmbH & Co. KG Flachsmarktstraße 8 D-32825 Blomberg +49 (0) 5235-3 00 info@phoenixcontact.com